



# GIA

## GELATO/ICE CREAM



E

## Maintenance And Use Manual

**OSCARTEK**  
512 South Airport Blvd.  
South San Francisco, CA 94080  
Tel: 855.885.2400 | 650.342.2400  
Fax: 650.342.7400  
[www.oscartek.com](http://www.oscartek.com)  
[sales@oscartek.com](mailto:sales@oscartek.com)

## 1. INTRODUCTION

### PRESENTATION

Dear Client,

Oscartek is pleased to number you among its customers and relies the bought machine will match your expectation. In order to get the best performances of the machine, we recommend you to follow all suggestions and instructions, which are included in this manual.

## 1.2. HOW TO USE THE MACHINE

### ▪ PERMITTED USES

This refrigerated display cabinet has been manufactured for **ice cream** presentation and sell.

### ▪ NOT PERMITTED USES

It is absolutely forbidden the use of the refrigerated display cabinet for **pharmaceutical products**.

## 1.3. RESPECTED NORMS

The refrigerated display cabinet has been manufactured in respect of the safety issues relevant to the following norm:

- |                                      |  |
|--------------------------------------|--|
| ➤ Machinery Directive N° 2006/42/CE  | : CE marking for machinery                                   |
| ➤ Directive N° 2006/95/CE            | : Low tension  |
| ➤ Directive N° 2004/108/CE           | : Electro-magnetic Compatibility                             |
| ➤ Directive N° 97/23/EC (P.E.D.)     | : European Pressure Equipment                                |
| ➤ Norm CEI 17-13/1 (EN 60439/1)      | : Realization of Electric Installations                      |
| ➤ Norm CEI EN 60335-1 (CEI 61-150)   | : Safety of household and similar electrical appliances      |
| ➤ Norm CEI EN 60335-2-24 (CEI 61-56) | : Special norms for refrigerators, freezers and ice machines |

For ETL marked cabinet:

- |                                     |
|-------------------------------------|
| ➤ UL471 / CAN/CSA C22.2 No. 120-M91 |
| ➤ NSF/ANSI 7 - 2009                 |

## 1.4. RESPONSIBILITY

Oscartek declines any responsibility relevant to damages on persons, animals and/or products in case of:

- No respect of in force norms
- Installation, which is not conform to the instructions manual
- No observance of all maintenance operations, which are suggested in this manual
- No previously agreed change operations with the manufacturer
- No proper use of the refrigerated display cabinet, for which the machine has been produced.

## 1.5. WARNING

Anytime Oscartek reserves the right to up-date the content of this manual and/or to modify the product in order to improve its quality and performance, without any previous notice and/or communication.

## 2. DISPLAY CASE DATA PLATE

### 2.1. DATA PLATE CONTENT

 <b>OSCARTEK</b>		 <b>OSCARTEK</b> www.oscartek.com 
<b>Model</b> 1	<b>Production Date</b>	
<b>Serial No.</b> 2	3	
 4 V/ 5 ph / 6 Hz	14	W/A
 Type 7	15	W
 No. 8	16	W
Gas 9	10	Kg Cl.11
Pmax 12	psig	Pmin 13 psig
1. Commercial name of the unit 2. Identification number 3. Production date 4. Voltage 5. Phases 6. Frequency 7. Compressor type 8. Number of compressor 9. Refrigerant type		
10. Refrigerant weight 11. Climatic rate (Cl.3 = +25°C/60% U.R.; Cl. 4 = +30°C/55% U.R.) 12. Test pressure – system high pressure side 13. Test pressure – system low pressure side 14. Nominal power/current absorbed during defrost 15. Max. power absorbed during defrost 16. Nominal power absorbed by heating elements (only if higher than 100W) 17. Lighting nominal power		


SAMPLE

### 3. TECHNICAL FEATURES

GIA GEL		GEL 12	GEL 18	GEL 24
Load limit height	H (mm)			
Ice cream pans	5,2 dm <sup>3</sup> (360x165x120 mm) 6,5 dm <sup>3</sup> (250x360x80 mm)	12 8	18 12	24 16
Display cabinet weight	(kg)	210	280	320
Display cabinet performances	Climatic class-Environment (°F/%R.H.) Working temperature (°F)		85 / 55 0	
Electrical supply	(V/ph/Hz)		220 / 1 / 60	
Refrigeration			Forced air circulation	
Dfrosting			Automatic, by reverse cycle	
Refrigerating gas			R 404A	
Glasses			Heated side glasses, hetaed front glass	
Standard internal compressor	Type No. Nominal power (W)		Hermetic single phase 1 600	
Power/current of display cabinet	(W/A)	1800/10,0	725	2.050/11,5 2.250/13,5
Closing for refrigerated area			Sliding doors	

### 4. LOAD LIMITS

In the following figure are shown the load limits for the displayed product.

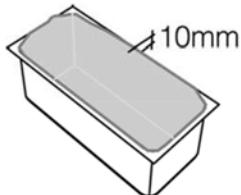

The product should be exposed in order to ensure right air flow ! So it's necessary to comply with the load before showed.

**ATTENTION! The manufacturer is not liable for failures caused by improper use of equipment!**

---

## 5. INSTALLATION

### 5.1. MACHINE HANDLING

- The ice cream display cabinet handling, from the truck to the final place, has to be made by any truck-lift, which is proper to its weight. The display cabinet shall be always balanced in order to ensure personnel integrity and machine functionality
- The cabinet can be shipped with or without wood packaging, in case wood crate will be used, will have a pallet base for an easy fork-lift handling. The pallet, however should be handle in the central position
- During the shipment, it is necessary to avoid any crash or/and shake of the display cabinet in order to not damage its frame, especially its glasses.
- Do not drag the display cabinet on the floor and do not push it on the upper glasses.

### 5.2 STOCK OF THE DISPLAY CABINET

- Whenever the cabinet has to be stoked, follow carefully what suggested before.
- Environmental temperature during the cabinet stock can have following range -15°C and + 55°C and humidity between 30% and 90%.
- The display cabinet has always to be protected by sunrays and raining.
- In case the display cabinet has to remain in stock quite long time before its use, keep it with its packaging in order to maintain its protection.

### 5.3. PACKAGING REMOVE

Before getting the display cabinet from the forwarding agent, check its conditions. In case it will be some damages, inform the driver and sign it on shipping documents. **Eventual damages relevant to the shipment and/or to the wrong stock, have not to be ascribed to the manufacturer.**

### 5.4. DISPLAY CABINET POSITION


The refrigerated display cabinet needs particular environmental conditions in order to offer the right performance, so that the area where it will be used has to respect following indications

- Floor has to be levelled perfectly, on the contrary keep the display cabinet on the horizontal position in order to guarantee a perfect defrosting water drain and avoid boring compressor noises.
- The display cabinet has to not be under the sun-rays in order to have its better refrigeration performance, has to remain inside the local or to be sheltered by window curtain. If what described above is not observed, it can determinate an increase of temperature of displayed product and an increasing power consume.  
In case will be not respected the above suggestions it can arise an increasing of temperature of the displayed product and/or an increasing ice phenomena on the evaporator and internal fans, which compromise the correct cold air circulation and product consistence
- The display cabinet has not to be under air currents due to open doors or windows, or under roof ventilators or under air condition outlets.
- The display cabinet has not to be placed close any heat source as heaters, ovens, etc
- The display cabinet has to have a sufficient place in order to ensure a correct custom service, to make an easy maintenance operation, to guarantee the right air flow necessary to make cold the condenser. Besides the warm air which flows out has to no have any obstacle or to invest other equipments in order to not reduce the correct functions.

## 5.8 – ELECTRICAL CONNECTION – REMOTE CONDENSING UNIT

In case the display cabinet has a remote condensing unit, the electric control panel is supplied separately; in case the display cabinet is without condensing unit, the machine can be supplied without external control panel. However the electrical connection has to be made in the point indicating in the pic. 5.3. In this point 5 connecting terminal are not fixed; they are numbered and represent:

- 1-2 Electrical supply
- 3-4 Compressor switch
- 5-6 Defrosting switch
- Ground connecting terminal

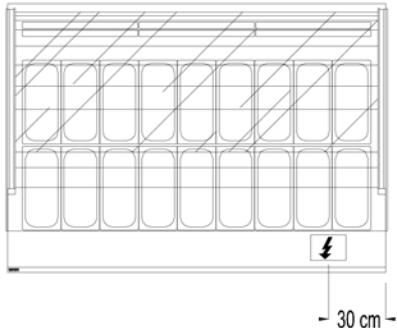

pic.5.3

## 5.9. IDRAULIC CONNECTION

- In case the display cabinet has an internal condensing unit by air, it is not necessary any water system connection.
- In case the display cabinet has a dipper well, it is necessary make the connection of its water outlet with the main water drain outlet; besides it is necessary set a load water tube to the dipper well, to the operator side, to the right or to the left, according to customer's choice.
- In case the display cabinet has condensing unit working fully or partially by water, it is necessary to connect the load water tube (this is the tube with thermo insulation) with the unload water tube(this is the tube without thermo insulation), of condenser working by water, to the water line


## 5.10. IDRAULIC CONNECTION - REMOTE CONDENSING UNIT

- In the case then display cabinet has a remote condensing unit, it is necessary make the connection of defrosting water outlet with the main water drain outlet. At the base of cabinet you can find a female pipe-fitting with a rapid receptacle for a tube Ø 32 mm

## 6. ROUTINE MAINTENANCE AND PERIODIC CHECKS

- These kinds of operations are at client's expenses.
- In case some malfunctioning of the unit are observed, please make sure this is not due to non-maintenance reasons, before you apply to qualified assistance.
- The accurate and periodic cleaning of the unit will reduce the risk of damages to the unit itself and to the products stored within.
- See following tab for reference.

**ATTENTION !** Before starting any maintenance and cleaning operation make sure you operate on the main switch in order to deactivate tension (pic. 6)

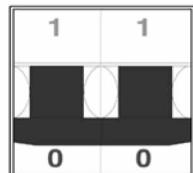

(pic 6)

### MAINTENANCE OPERATIONS AND THEIR FREQUENCY. A SUMMARY TAB.

OPERATION	DESCRIPTION	FREQUENCY
Surfaces' cleaning	<ul style="list-style-type: none"> <li>• Wash exclusively with warm water and neutral soap; rinse abundantly and wipe off with a soft cloth.</li> <li>• Do not use abrasive products</li> </ul>	weekly
Plastic surfaces' cleaning	<ul style="list-style-type: none"> <li>• Wash exclusively with warm water and neutral soap; rinse abundantly and wipe off with a soft cloth.</li> <li>• Do not use alcohol, acetone and any solvent that might spoil the look and structure of the material.</li> </ul>	weekly
Glass surfaces' cleaning	<ul style="list-style-type: none"> <li>• Use only specific products for glass cleaning</li> <li>• Using water alone might lead to calcareous deposits on the glass surfaces</li> </ul>	daily
Wooden surfaces' cleaning	<ul style="list-style-type: none"> <li>• Use exclusively a wet cloth.</li> </ul>	weekly
<b>Additional defrost RECOMMEND CASE BE TURNED OFF ONCE A WEEK FOR A OVERNIGHT DEFROST (10-12HRS).</b>	<ul style="list-style-type: none"> <li>• Under particular conditions of temperature and humidity, the frost that normally forms on the evaporator and fans might increase in volume, so leading to a faulty functioning of the unit.</li> <li>• If these conditions should last, the assistance of a qualified technician shall be needed. Waiting for this service, it is suggested to operate one or more defrost cycles (despite the damages this might cause to the stored product)</li> </ul>	Waiting for qualified assistance
Periodic defrost	<ul style="list-style-type: none"> <li>• In order to obtain the best performance from the cooling system, we suggest to operate an extended defrost cycle.</li> <li>• Before you do that, please remove displayed products from inside the cabinet; always operate an additional defrost cycle in order to remove from the evaporator the largest possible amount of frost or ice. Turn the main switch off for 5 hours (min.)</li> <li>• Before re-starting the unit, make sure that frost has totally melted and wipe carefully.</li> </ul>	max. 15 DAYS


**ATTENTION! DO NOT CLEAN THE UNIT WITH WATER JETS**

## 7. EXTRAORDINARY MAINTENANCE

This type of operation has to be made by qualified technician only.

**ATTENTION!** Before operating any maintenance, make sure the tension is deactivated. (pic.11).

- Lamps' replacement: qualified technician needed.
- Air condenser cleaning: qualified technician needed. When the fan is switched off you can clean the condenser with a compressed air jet. Never use metallic brushes. Use protection gloves (pic.7).

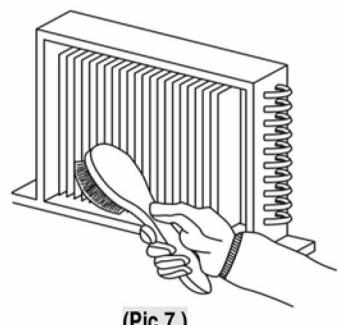

(Pic.7.)

## 8. DEFECTS AND REMEDIES

DEFECT	PROBABLE CAUSES	POSSIBLE REMEDIES
The unit does not work	Automatic switch released due to absorption overload	Re-start the automatic switch
	Main switch off	Turn the main switch on
	Refrigeration switch off	Turn the refrigeration switch on
	Electrical black-out in the building	If the black-out does not end in a reasonable time frame, it become necessary to move the displayed product in another refrigerator
The temperature inside the display area does not get enough cold	The evaporator(s) is blocked by ice forming	Operate a complete defrost cycle after having displaced the products in another refrigerator. Do not put the product back in the cabinet until the real defect has been identified
	The internal fans are damaged or not working	Replace the damaged fans. If the fans are not damaged, an electrical defect must be identified. If the fans are replaced, the blades' inclination have to be maintained unchanged
	Excess of internal ventilation	Replace the fans and make sure that blades' inclination is kept unchanged
	The pre-set temperature of the digital control panel is wrong	Set the correct temperature
	The digital control is not working	Replace the slave module or the temperature sensor, after you made clear which one is faulty
	The display area is crossed by draught or exposed to direct/reflected sunbeams	Eliminate draughts and try to avoid sunbeams interference in any way
	Air condenser is clogged by dust or dirt	Clean the condenser with accuracy
	The cooling air flow of the condenser is not sufficient	Remove everything that might obstacle the air flow through the condenser
	Refrigerant gas not sufficient inside the cooling system	Find and remove the leak inside the system. Refill the system with the refrigerant
	The cooling water flow of the water condenser is not sufficient	Check that water supply is operating. In case it is, just regulate (or replace) the regulation valve
The product gets too hard next to air outlet and too soft next to air intake	Front evaporator blocked by frost	Verify the efficiency of the gasket seal (relatively to the glass superstructure). Verify that the display area is not crossed by draughts. Verify that backsliders (or night blind) are always closed, peak hours excepted. Verify that internal ventilation is sufficient and that the product does not exceed 10mm above the pans level. Act accordingly
	Front evaporator blocked by ice	All the a.m. checks are required Verify, in addition, the defrost cycle efficiency
	Back evaporator blocked by ice	Verify that the refrigerating and electric systems of the unit are working properly
	Internal fans are not efficient	Restore the efficiency of the fans by replacing the damaged ones
	The basket seal of the glass superstructure is not sufficient	Verify the seriousness of the defect and make sure the draughts are minimized
Some of the products tend to soften, while some other keep the right consistence	The temperature inside the display area is not fit for the products that get too soft	Since the storage temperature cannot be appropriate for any gelato product, based on different flavours and compositions, it is suggested to display only similar products together
The compressor does not start or it does not hold operating	There is no electrical supply	Verify there is no black-out in progress. Turn all the power switches on.
	The supply tension is too low	Verify that nominal tension at connecting clamps is 220V; a tension between 198V and 242V will be acceptable. If the tension does not reach 198V, the compressor might have problems in starting. Verify the efficiency of electric installation including the connecting clamps to the compressor
	The pre-set temperature on the thermostat is too high	If the preset temperature is higher than in the display area, the compressor is not going to work. Change the settings if you verify that the preset temperature is not enough low
	The intervention of the max pressure valve (where present)	Identify the probable cause among the following: The air condenser is blocked - The cooling fan of the air condenser is not working - The room temperature is too high - Lack of cooling water in the water condenser - The pressure valve is broken - Remove the cause

DEFECT	PROBABLE CAUSES	POSSIBLE REMEDIES
The compressor works constantly or for too long periods	The temperature inside the room is too high	The compressor can only work constantly if there is no chance of decreasing room temperature (for instance with a.c. system)
	The temperature of the compressors' room is too high (remote comp.)	See above
	The air condenser is blocked	Clean the condenser carefully
	Cooling air flow of the water condenser is not sufficient	Check the efficiency of the regulation valve and make sure that taps are turned on
	Lack of refrigerant	Identify the eventual leak and refill with refrigerant
	Internal ventilation is not sufficient	Restore a proper ventilation by replacing the faulty fans or by removing the eventual obstacle
	Evaporators are extremely clogged	Operate a complete defrost cycle
	The temperature set on the thermostat is too low	Adjust temperature settings
Temperature is not displayed on the digital panel	Flat battery	Replace battery
	Sensor does not work properly	Replace digital thermostat
	Faulty electronics	Replace digital thermostat
Defrost water missing	Water drain pipes are blocked	Remove the obstacle
	Defrost cycle is not efficient	Verify the efficiency of control panel (slave module, sensor, solenoid valve..) and the position of the end cycle sensor
Lighting is not working	The switch is off	Turn the switch on
	The neon lamp is not properly fitted in its case	Ad just the lamp by rolling it
	Exhausted lamp	Replace the lamp
	Ballasts or starter are not efficient	Replace faulty components
The unit is too noisy	Vibrations of internal plates	Tighten all the fixing screws
	Internal fans are not fixed well	See above
	Fans' blades are not fixed well	Replace faulty fans. If there is friction between the blades and some ice formation, then act on defrost cycle settings
	Pipes are in contact with other parts of equipment	Avoid any contact between pipes and other parts; a constant rubbing might wear the pipes out and give way to refrigerant leaking
	The unit is not well levelled	Adjust the levelling
Condensation water forming on the glasses	Transformer is not working	Check that the transformer is correctly supplied - Verify the correct functioning of the transformer fuse - Replace the transformer
	Heating circuit interrupted	Replace the glasses

## REFRIGERATION AND ELECTRICAL SYSTEM CABLE CONNECTION GUIDE


AGD	DIGITAL FLAVOURS DISPLAY FEEDER	RES28	FRONT GLASS LOWER FRAME HEATING ELEMENT
AEL	ELECTRONIC BALLAST	RES29	FRONT GLASSES COUPLING PROFILE HEATING ELEMENT
AP	SERVICE VALVE	RES30	DOORS FRAME MIDDLE POST HEATING ELEMENT
CA	SUPPLY CABLE	RES31	GLASSES PERIMETRAL FRAME HEATING ELEMENT
CAR	AIR CONDENSER	RES32	HEATED DOORS HEATING ELEMENTS
CE	ELECTRONIC CONTROL	RES33	WATER DRAIN HEATING ELEMENT
CN	MULTIPOLEAR CONNECTOR	RES34	DOORS FRAME HEATING ELEMENT
CO	COMPRESSOR	RES35	COMPRESSOR CRANKCASE HEATING ELEMENT
D	DIOD	RES36	FRONT GLASS FRAME HEATING ELEMENT
DEV	SHUNT	RES37	CABINET FRAME HEATING ELEMENT
DR	REMOTE DISPLAY	RES38	HOT COMPARTMENT HEATING ELEMENT
EM	PHOTOCELL Emitter	REV	CONDENSER FAN SPEED CONTROL
EV	EVAPORATOR	REVC	CONDENSER FAN RELAY
F	FUSE	RI	REFRIGERANT TAP
FD	FILTER DRIER	RIC	COMPRESSOR DELAYER
FLU	WATER FLOW SWITCH	RICV	PHOTOCELL RECEIVER
FR	COMPRESSOR THERMAL PROTECTION	RIS	RESERVE , ANTI-FOG HEATER ELEMENT
HL	COMPRESSOR ALARM LIGHT	RL	LIQUID RECEIVER
I	GENERIC SWITCH	RLA	WATER LEVEL ELECTRONIC CONTROL
IEC	WATER EVAPORATION BIN SWITCH	RO	OIL HEATER ELEMENT
IGD	DIGITAL FLAVOURS DISPLAY	SAA	ABSENCE OF WATER LIGHT
II	LIGHTING SWITCH	SC	CONDENSER PROBE
IL	SIGHT GLASS	SD	TERMINAL BOX
IMC	WARM SHELF SWITCH	SDC	COMPRESSOR TERMINAL BOX
INV	INVERTER	SE	PROXIMITY SENSOR
IR	REFRIGERATION SWITCH	SEC	MAIN SWITCH
IRP	LIGHT REFRIGERATION SWITCH	SFV	TANK BOTTOM HEATING COIL
IV	INTERNAL FAN SWITCH	SIDG	FLAVOURS DISPLAY DIGITAL SYSTEM
KM	CONTACTOR	SL	LIQUID SEPARATOR
LF	FRONT LIGHTING	SLA	WATER LEVER PROBE
LI	INTERNAL UPPER LIGHTING	SPC	COMPRESSOR LIGHT
LIA	FRONT LIGHTING	SPMC	WARM SHELF LIGHT
LIG	FLAVOURS DISPLAY LIGHTING	SPR	ELECTRIC SUPPLY LIGHT
LIP	REAR LIGHTING	SPS	DEFROSTING LIGHT
MDIG	DIGITAL MODULE FOR FLAVOURS DISPLAY	SS	DEFROSTING PROBE
MM	SPINNING SHELVES ELECTRIC MOTOR	ST	TEMPERATURE PROBE
MUC	CONDENSING UNIT ELECTRIC CONNECTIONS	STR	LIGHTING STARTER
PA	HIGH PRESSURE CONTROL	SU	HUMIDITY PROBE
PD	HIGH-LOW PRESSURE CONTROL	T	TEMPERATURE CONTROL
PO	WATER PUMP	TI	WINTER THERMOSTAT
QE	EXTERNAL ELECTRIC PANEL	TC	CAPILLARY TUBE
QF	MAGNETIC-THERMIC SWITCH	TE	TIMER
R	LIGHTING BALLAST	TER	THERMOMETER
RADD	RECTIFIER	TF	FUSIBLE PLUG
RE	GENERIC RELAY	TMC	WARM SHELF THERMOSTAT
REL	ELECTRONIC BALLAST	TP	LIGHTING FIXTURES REGRIGERATOR THERMOSTAT
REP	ELECTRONIC CONTROL TEMPERATURE REPEATER	TRA	TRANSFORMER
RES1	COLD AIR DISCHARGE HEATING ELEMENT	TRC	ELECTRONIC CONTROL TRANSFORMER
RES2	FRONT PROFILE HEATING ELEMENT	TREV	WATER EVAPORATION HEATER ELEMENT THERMOSTAT
RES3	RIGHT/LEFT GLASS HEATING ELEMENT	TS	SECURITY THERMOSTAT
RES4	FRONT GLASS HEATING ELEMENT	TVC	CONDENSER FAN THERMOSTAT
RES5	DEFROST HEATING ELEMENT	V	COMPRESSOR FAN / GENERAL USE
RES6	WATER EVAPORATION HATING ELEMENT	VC	CONDENSER FAN
RES7	TOP LIGHTING FIXTURE HEATING ELEMENT	VEC	WATER EVAPORATION BIN
RES8	LATERAL GLASS SUPPORT HEATING ELEMENT	VES	EXPANSION VALVE
RES9	FRONT BAND HEATING ELEMENT	VI	INTERNAL FAN
RES10	COUPLING BAND HEATING ELEMENT	VPA	CONDENSING PRESSURE CONTROL WATER VALVE
RES11	SERVICE TOP HEATING ELEMENT	VR	CHECK VALVE
RES12	UPPER BAND/DOOR FRAME HEATING ELEMENT	VRA	SUCTION PRESSURE REGULATION VALVE
RES13	HOT DRY/BAIN MARIE DISPLAY HEATING ELEMENT	VRE	EVAPOTATING PRESSURE REGUTATION VALVE
RES14	ANTI-FOG SUCTION AIR BAND HEATING ELEMENT	VS	GENERAL USE SOLENOID VALVE
RES15	WARM SHELF HEATING ELEMENT	VSA	SOLENOID WATER VALVE
RES16	SIDE BANDS/ FRONT GLASS HINGE HEATING ELEMENT	VSAB	BY-PASS SOLENOID WATER VALVE
RES17	DEHUMIDIFICATION HEATING ELEMENT	VSIC	REVERSING CYCLE SOLENOID VALVE
RES18	DEFROSTING WATER DRAIN HEATING ELEMENT	VSL	LIQUID SOLENOID VALVE
RES19	RING FRAME HEATING ELEMENT	VSS	DEFROSTING SOLENOID VALVE
RES20	SIDE BAND HEATING ELEMENT	VT	POWER REGULATOR
RES21	SUCTION AIR GLASS HEATING ELEMENT	VV	GLASS FAN
RES22	OUTLET AIR HEATING ELEMENT	X1	CABINET CONNECTIONS
RES23	REAR GLASS HEATING ELEMENT	X2	EXTERNAL ELECTRIC PANEL CONNECTIONS
RES24	INTERNAL GLASS HEATING ELEMENT	X3	CONDENSING UNIT CONNECTIONS
RES25	FRONT GLASS UPPER FRAME HEATING ELEMENT		
RES26	FRONT GLASS LATERAL/LOWER FRAME HEATING ELEMENT		
RES27	FRONT GLASS LATERAL FRAME HEATING ELEMENT		



C

B

A

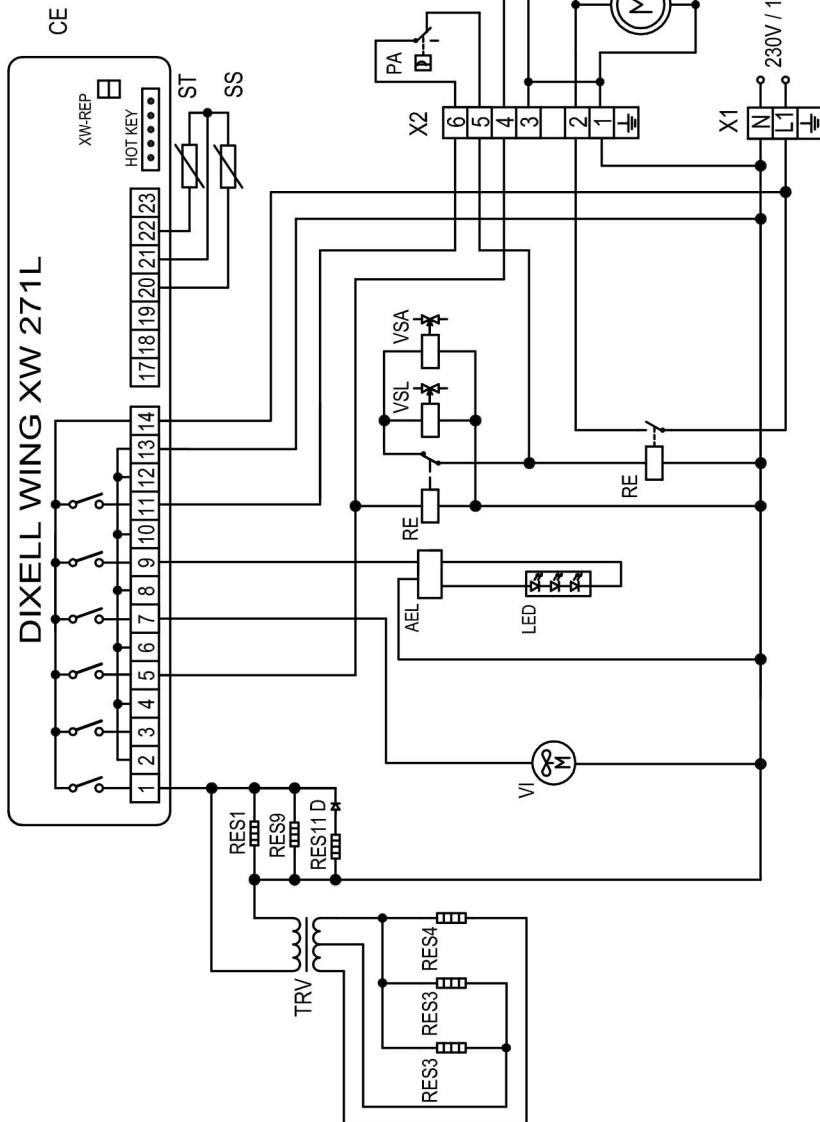

NOTE : La valvola solenoide dell'acqua VSA è presente solo nelle unità condensatrici miste aria-acqua.  
Nel caso di motore esterno monofase il sezionatore magnetico-termico/ differenziale è a carico del cliente/installatore e si raccomanda di installarlo nelle immediate vicinanze del motore per rendere sicure le operazioni di manutenzione

NOTE : The water solenoid valve VSA is only for mixed water-air condensation  
In case of single-phase outside motor the differential thermal switch must be placed by the customer  
It is recommended to install this switch in the immediate vicinity of the condensing unit to make sure maintenance




MATERIALE	Q.tà	Peso (kg)
FINITURA		

REV.	DATA	DESCRIZIONE	VERIFICA	APPROVAZIONE	QUOTE SENZA INDICAZIONE DI TOLLERANZA - Grado di precisione medio UNI 5307			SCALA			Togliere Bavature Toll. generali vedi tabella					
					3,2	( $\varnothing$ )	Rugosità - Ra	0+6 ±0,06	6+30 ±0,1	30+120 ±0,2	120+315 ±0,3	315+1000 ±0,5	1000+2000 ±1°	3+6 e 30°	6+30 e 20°	oltre 120 e 10°
0	19/01/12	EMMISSIONE														

DENOMINAZIONE		Schema elettrico funzionale / Electrical wiring Diagram			TRATT. SUPERFICIALE	
(U.C. monofase interna, sbrinam. add inversione di ciclo - Condensing unit built in, reverse cycle defrost)			GIA GEL 12-18			
			Condensing unit built in, reverse cycle defrost)			
			P/N			
			SEF 400-12			
			DATA			
			19/01/2012			
			FOGLIO			
			Certified Quality System ISO			
			9001:2000			
			6			



DIXELL WING XW 271L

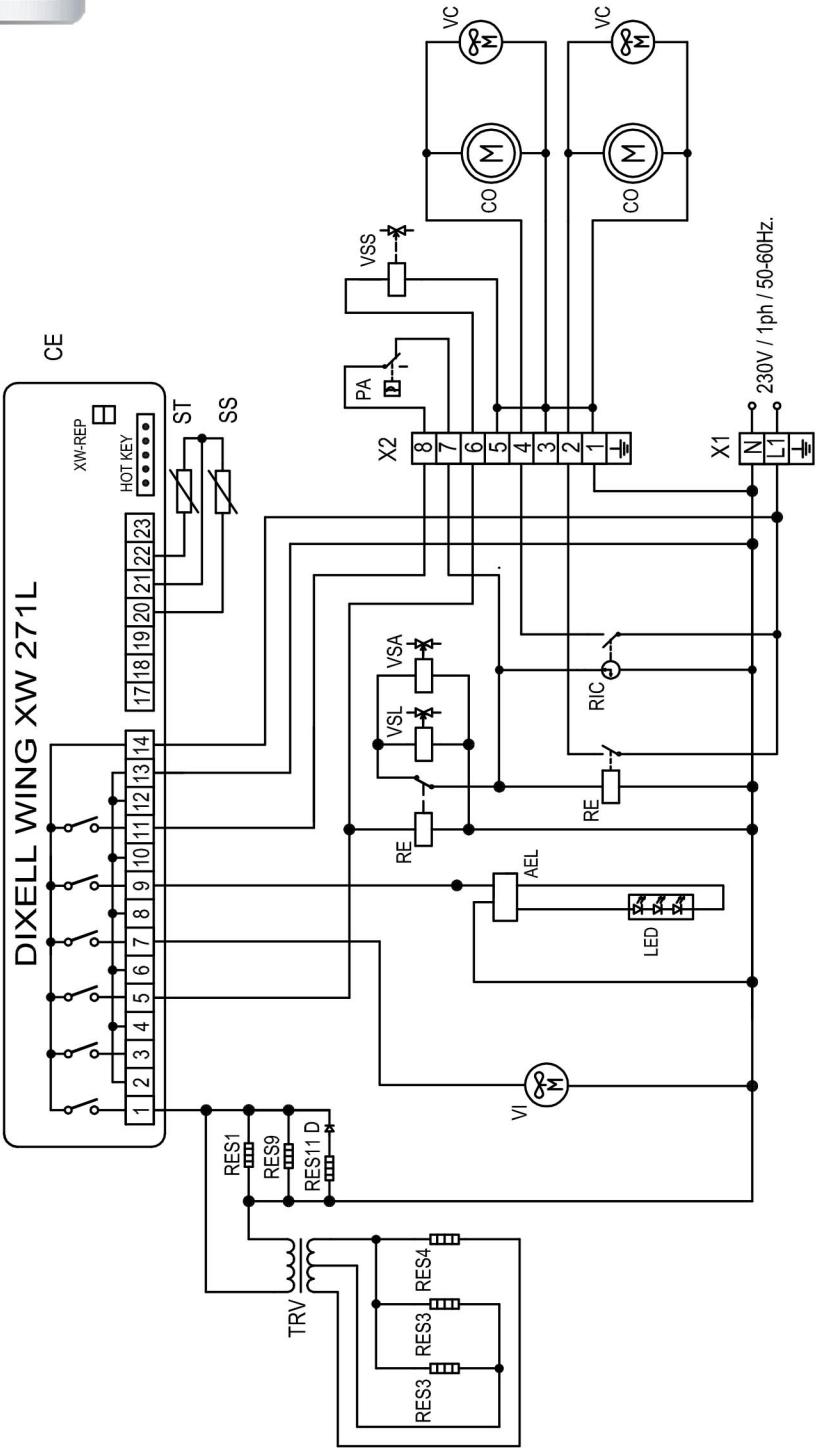


**NOTE :** La valvola solenoide dell'acqua VSA è presente solo nelle unità condensatrici miste aria-acqua.  
Nel caso di motore esterno monofase il sezionatore magneto-termico/ differenziale è a carico del cliente/installatore e si raccomanda di installarlo nelle immediate vicinanze del motore per rendere sicure le operazioni di manutenzione


**NOTE :** The water solenoid valve VSA is only for mixed water-air condensation  
In case of single-phase outside motor the differential/thermal switch must be placed by the customer  
It is recommended to install this switch in the immediate vicinity of the condensating unit to make sure maintenance

1      2      3      4      5      6


### EXTERNAL ELECTRICAL BOX

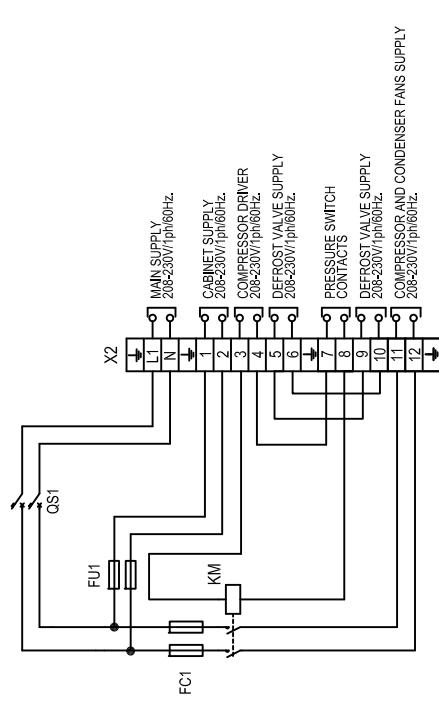

### CABINET

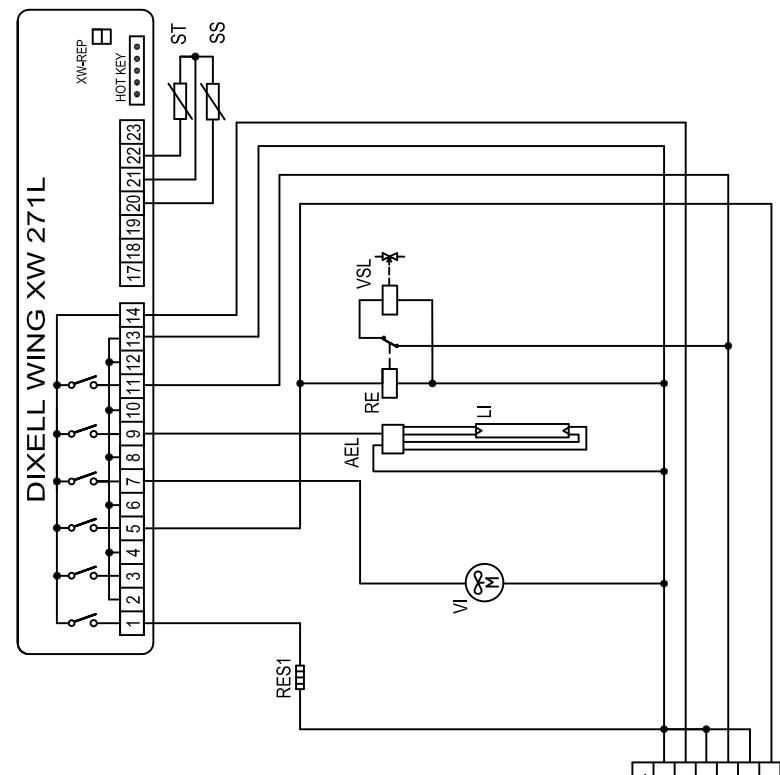

### CONDENSING UNIT

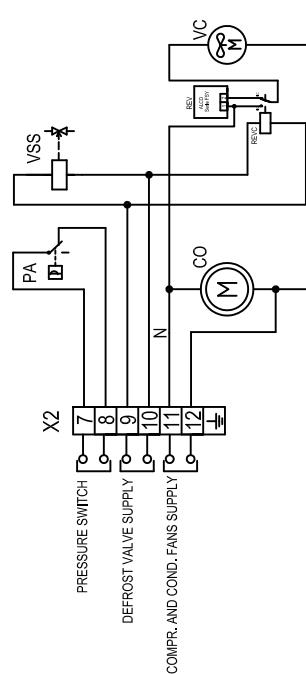

QUOTE SENZA INDICAZIONE DI TOLLERANZA - Grado di precisione medio UNI 5307

6±30 | 0,15 | 30±120 | 120±315 | 315±1000 | 1000±2000 | ±1° | 3±6 | 6±30 | 30±120 | oltre 120 | Smussi e Raggi 0,3±0,8

ElectricalWiring Diagram

GELATO

External single-phase condensing unit

P/N

SEF V9GEL-INV-UCE MONO-ETL

12/06/2014

Pascolini Ascanio

DATA

12/06/2014

Certified Quality System ISO 9001:2008



6

TRATT. SUPERFICIALE

Togliere Bavature

Toll. generali vedi tabella

SCALA

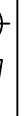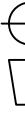

C

B


A

A termini di legge ci riserviamo la proprietà di questo disegno con diritto di riprodurlo o renderlo noto a terzi senza nostra approvazione

## 1\_Remove the aesthetic panelling



## 2\_Remove the front glass

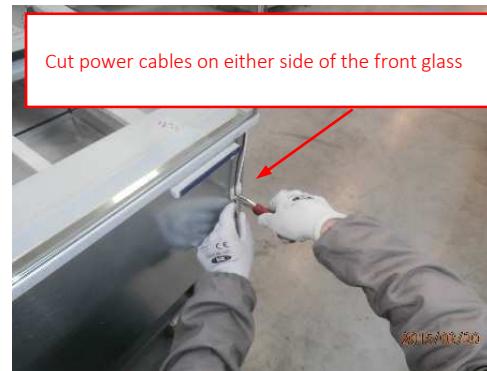

### 3\_Remove the top glass

cut the LED power supply wires that exit under the tank (left side operator)





Pull down the tube and remove it from the blocks




remove the led cable from the tube



remove the top supporting screws on both sides

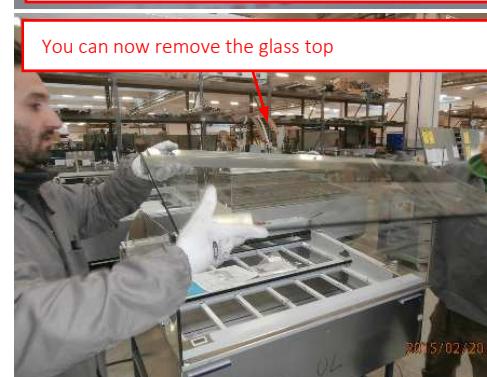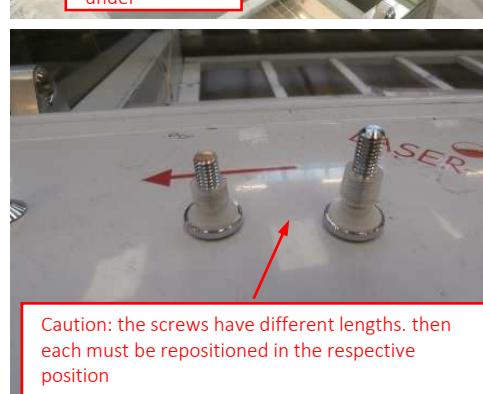

### 4\_Remove the glass sides

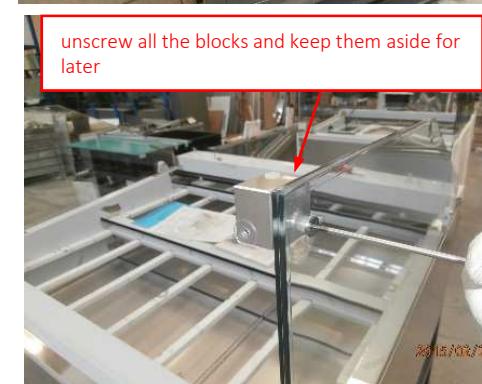

## 5\_Mount sides (higher structure glass)



## 6\_Mount glass top





## 7\_Spread adhesive thickness



Apply the clear adhesive thickness supplied on the outer rim and top of the glass side



## 8\_Mount front (higher structure glass)

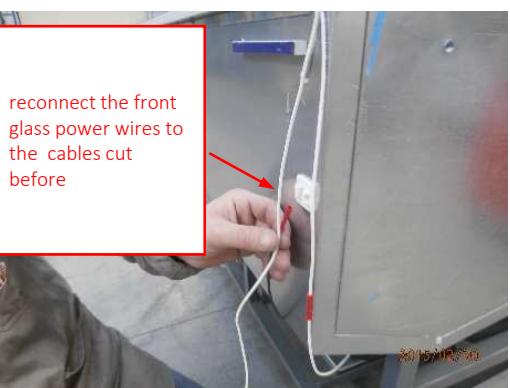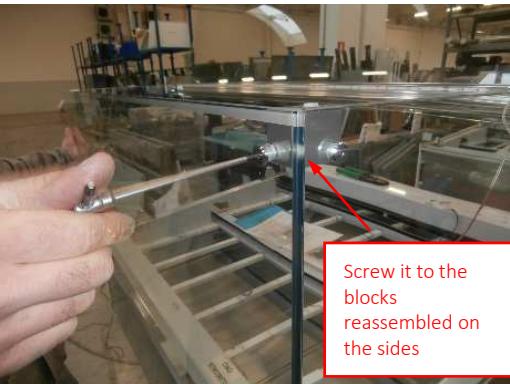

## WING

## XW270L - XW271L

## 1. GENERAL WARNING

1.1  PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.

1.2  SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation.
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell s.r.l." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

## 2. GENERAL DESCRIPTION

Models XW270L and XW271L, 38x185 mm format, are microprocessor based controllers suitable for applications on medium or low temperature refrigerating units. They are provided with six relay outputs to control compressor, defrost - which can be either electrical or hot gas - the evaporator fans, the lights, the alarm and an auxiliary output. In XW271L the auxiliary output is configured as anti-condensing heater.

They are also provided with three NTC probe inputs, one for temperature control, one to control the defrost end temperature of the evaporator and the third, optional, for the display. There are two digital inputs (free contact) for the door switch and configurable by parameter.

The standard TTL output allows the user to connect, by means of a TTL/RS485 external module, a ModBUS-RTU compatible monitoring system and to programme the parameter list with the "Hot Key".

An optional output for remote display "XW-REP" is available.

## 3. CONTROLLING LOADS

## 3.1 THE COMPRESSOR

The regulation is performed according to the temperature measured by the thermostat probe with a positive differential from the set point: if the temperature increases and reaches set point plus differential the compressor is started and then turned off when the temperature reaches the set point value again.

In case of fault in the thermostat probe the start and stop of the compressor are timed through parameters "CON" and "COF".

## 3.2 FAST FREEZING

When defrost is not in progress, it can be activated the keypad by holding the  key pressed for about 3 seconds. The compressor operates in continuous mode for the time set through the "CCT" parameter. The cycle can be terminated before the end of the set time using the same activation key,  for about 3 seconds.

## 3.3 DEFROST

Three defrost modes are available through the "tdF" parameter: defrost with electrical heater, hot gas or thermostatic defrost. The defrost interval is control by means of parameter "EdF": (EdF=In) the defrost is made every "tdF" time, (EdF=Sd) the interval "tdF" is calculate through Smart Defrost algorithm (only when the compressor is ON and the evaporator temperature is bigger than "SdF" parameter).

At the end of defrost the drip time is controlled through the "FdF" parameter.

## 3.4 CONTROL OF EVAPORATOR FANS

The fan control mode is selected by means of the "FnC" parameter:

**FnC=C-n** fans will switch ON and OFF with the compressor and **not run** during defrost;

**FnC=C-y** fans will run continuously, but not during defrost.

After defrost, there is a timed fan delay allowing for drip time, set by means of the "FnD" parameter.

**FnC=O-n** fans will switch ON and OFF with the compressor and **run** during defrost;

**FnC=O-y** fans will run continuously also during defrost

An additional parameter "FSt" provides the setting of temperature, detected by the evaporator probe, above which the fans are always OFF. This can be used to make sure circulation of air only if his temperature is lower than set in "FSt".

## 3.5 AUXILIARY OUTPUT

The auxiliary output is switch ON and OFF by means of the corresponding button on the keyboard.

The auxiliary output of the XW271L model controls the anti-condensing heater and it is automatically activated if the room temperature is lower than the "SAA" parameter.

## 4. KEYBOARD



To display and modify target set point; in programming mode it selects a parameter or confirm an operation.  
By holding it pressed for 3s when max or min temperature is displayed it will be erased.

To see the max. stored temperature; in programming mode it browses the parameter codes or increases the displayed value. By holding it pressed for 3s the fast freezing cycle is started.

To see the min stored temperature; in programming mode it browses the parameter codes or decreases the displayed value.

By holding it pressed for 3s the defrost is started.

Switch ON and OFF the cold room light.

By holding it pressed for 3s Energy Saving function is started or stopped.

For XW270L model. Switch ON and OFF the auxiliary output.

For XW271L model. Switch ON and OFF the anti-condensing heater output.

Switch ON and OFF the instrument.

## KEY COMBINATIONS

 +  To lock and unlock the keyboard.

 +  To enter the programming mode.

 +  To exit the programming mode.

## 4.1 USE OF LEDS

Each LED function is described in the following table.

LED	MODE	Function
	ON	The compressor is running
	FLASHING	- Programming Phase (flashing with LED  ) - Anti-short cycle delay enabled
	ON	The fan is running
	FLASHING	Programming Phase (flashing with LED  )
	ON	The defrost is enabled
	FLASHING	Drip time in progress
	ON	The Fast Freezing cycle is enabled
	ON	- ALARM signal - In "Pr2" indicates that the parameter is also present in "Pr1"
	ON	(Present only in XW271L) The Anti-condensing heater relay (Aux) is ON.

Function of the LEDs placed on the left top side of buttons:

BUTTON	MODE	FUNCTION
SET	FLASHING	The Set point is displayed and it can be modified
SET	FAST FLASHING	The Energy Saving is enabled
DEFROST	ON	The Manual Defrost is activated
ENERGY SAVING	ON	The Energy Saving is enabled
LIGHT	ON	The Light is ON
AUX	ON	The Auxiliary output is ON (XW270L)
HEATER	ON	The Anti-condensing heater is ON (XW271L)
ON/OFF	ON	The instrument is OFF

## 4.2 HOW TO SEE THE MIN TEMPERATURE

- Press and release the .
- The "Lo" message will be displayed followed by the minimum temperature recorded.
- By pressing the  key or waiting for 5s the normal display will be restored.

## 4.3 HOW TO SEE THE MAX TEMPERATURE

- Press and release the .
- The "Hi" message will be displayed followed by the maximum temperature recorded.
- By pressing the  key or waiting for 5s the normal display will be restored.

## 4.4 HOW TO RESET THE MAX AND MIN TEMPERATURE RECORDED

To reset the stored temperature, when max or min temperature is displayed :

- Press SET key until "rst" label starts blinking.

N.B. After the installation RESET the temperature stored .

## HOW TO SEE AND MODIFY THE SET POINT

- Push and immediately release the SET key: the display will show the Set point value;
- The SET LED start blinking;
- To change the Set value push the  or  arrows within 10s.
- To memorise the new set point value push the SET key again or wait 10s.

**TO START A MANUAL DEFROST**

- Push the DEF key for more than 2 seconds and a manual defrost will start.

**TO ENTER IN PARAMETERS LIST "PR1"**

To enter the parameter list "Pr1" (user accessible parameters) operate as follows:



- Enter the Programming mode by pressing the Set and DOWN key for few seconds ( and start blinking).
- The instrument will show the first parameter present in "Pr1".

**TO ENTER IN PARAMETERS LIST "PR2"**

To access parameters in "Pr2":

- Enter the "Pr1" level.
- Select "Pr2" parameter and press the "SET" key.
- The "PAS" flashing message is displayed, shortly followed by "0 - -" with a flashing zero.
- Use  $\Delta$  or  $\nabla$  to input the security code in the flashing digit; confirm the figure by pressing "SET". The security code is "321".
- If the security code is correct the access to "Pr2" is enabled by pressing "SET" on the last digit.

Another possibility is the following: after switching ON the instrument the user can push Set and DOWN keys within 30 seconds.

**NOTE:** each parameter in "Pr2" can be removed or put into "Pr1" (user level) by pressing "SET" +  $\nabla$ . When a parameter is present in "Pr1" LED ( ) is on.

**HOW TO CHANGE THE PARAMETER VALUE**

- Enter the Programming mode.
- Select the required parameter with  $\Delta$  or  $\nabla$ .
- Press the "SET" key to display its value ( and LED starts blinking).
- Use  $\Delta$  or  $\nabla$  to change its value.
- Press "SET" to store the new value and move to the following parameter.

**To exit:** Press SET + UP or wait 15s without pressing a key.

**NOTE:** the new programming is stored even when the procedure is exited by waiting the time-out.

**HOW TO LOCK THE KEYBOARD**

- 
- Keep the  $\Delta$  and  $\nabla$  keys pressed together for more than 3 s the  $\Delta$  and  $\nabla$  keys.
  - The "POF" message will be displayed and the keyboard is locked. At this point it is only possible the viewing of the set point or the MAX o Min temperature stored and to switch ON and OFF the light, the auxiliary output and the instrument.

**TO UNLOCK THE KEYBOARD**

Keep the  $\Delta$  and  $\nabla$  keys pressed together for more than 3s.

**ON/OFF FUNCTION**

By pushing the ON/OFF key, the instrument shows "OFF" for 5 sec. and the ON/OFF LED is switched ON.

During the OFF status, all the relays are switched OFF and the regulations are stopped; if a monitoring system is connected, it does not record the instrument data and alarms.

**N.B.** During the OFF status the Light and AUX buttons are active.

**TO SEE THE PROBE VALUES**

- Enter in "Pr2" level.
- Select "Prd" parameter with  $\Delta$  or  $\nabla$ .
- Press the "SET" key to display "Pb1" label alternate with Pb1 value.
- Use  $\Delta$  and  $\nabla$  keys to display the other probe values.
- Press "SET" to move to the following parameter.

**PARAMETER LIST****REGULATION**

**Hy Differential:** (0,1÷25,5°C; 1÷45°F): Intervention differential for set point, always positive. Compressor Cut IN is Set Point Plus Differential (Hy). Compressor Cut OUT is when the temperature reaches the set point.

**LS Minimum set point limit:** (-50,0°C+SET; -58°F+SET) Sets the minimum acceptable value for the set point.

**US Maximum set point limit:** (SET+110°C; SET+230°F) Set the maximum acceptable value for set point.

**OdS Outputs activation delay at start up:** (0÷255 min) This function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter. (AUX and Light can work)

**AC Anti-short cycle delay:** (0÷30 min) interval between the compressor stop and the following restart.

**Cct Thermostat override:** (0min ÷23h 50min) allows to set the length of the continuous cycle. Can be used, for instance, when the room is filled with new products.

**Con Compressor ON time with faulty probe:** (0÷255 min) time during which the compressor is active in case of faulty thermostat probe. With CON=0 compressor is always OFF.

**COF Compressor OFF time with faulty probe:** (0÷255 min) time during which the compressor is off in case of faulty thermostat probe. With COF=0 compressor is always active.

**DISPLAY**

**CF Temperature measurement unit:** °C = Celsius; °F = Fahrenheit . When the measurement unit is changed the SET point and the values of the regulation parameters have to be modified

**rES Resolution (for °C):** (in = 1°C; de = 0,1°C) allows decimal point display.

de = 0,1°C

in = 1 °C

**Lod Local display :** select which probe is displayed by the instrument:

P1 = Thermostat probe

P2 = Evaporator probe

P3 = auxiliary probe

1r2 = difference between P1 and P2 (P1-P2)

**Red Remote display :** select which probe is displayed by the remote display (XW-REP)

P1 = Thermostat probe

P2 = Evaporator probe

P3 = auxiliary probe

1r2 = difference between P1 and P2 (P1-P2)

**DEFROST**

**tdF Defrost type:**

rE = electrical heater (Compressor OFF)

rT = thermostat defrost. During the defrost time "MdF", the heater switches On and OFF depending on the evaporator temperature and "dtE" value.

in = hot gas (Compressor and defrost relays ON)

**EdF Defrost mode:**

in = interval mode. The defrost starts when the time "ldf" is expired.

Sd = Smartfrost mode. The time ldF (interval between defrosts) is increased only when the compressor is running (even non consecutively) and only if the evaporator temperature is less than the value in "SdF" (set point for SMARTFROST).

**MdF Set point for SMARTFROST:** (-30÷30 °C/ -22÷86 °F) evaporator temperature which allows the ldF counting (interval between defrosts) in SMARTFROST mode.

**dtE Defrost termination temperature:** (-50,0÷110,0°C; -58÷230°F) (Enabled only when the evaporator probe is present) sets the temperature measured by the evaporator probe which causes the end of defrost.

**IdF Interval between defrosts:** (1÷120h) Determines the time interval between the beginning of two defrost cycles.

**MdF (Maximum) duration of defrost:** (0÷255 min) When P2P = n, no evaporator probe, it sets the defrost duration, when P2P = y, defrost end based on temperature, it sets the maximum length for defrost.

**dfD Display during defrost:**

rt = real temperature;

it = temperature reading at the defrost start;

Set = set point;

dEF = "dEF" label;

dEG = "dEG" label;

**adD Defrost display time out:** (0÷255 min) Sets the maximum time between the end of defrost and the restarting of the real room temperature display.

**dtD Drain down time:** (0÷60 min.) time interval between reaching defrost termination temperature and the restoring of the control's normal operation. This time allows the evaporator to eliminate water drops that might have formed due to defrost.

**dPO First defrost after start-up:**

y = Immediately;

n = after the ldF time

**dAF Defrost delay after fast freezing:** (0min÷23h 50min) after a Fast Freezing cycle, the first defrost will be delayed for this time.

**FANS**

**FnC Fan operating mode:**

C-n = running with the compressor, OFF during the defrost;

C-y = running with the compressor, ON during the defrost;

O-n = continuous mode, OFF during the defrost;

O-y = continuous mode, ON during the defrost;

**Fnd Fan delay after defrost:** (0÷255 min) The time interval between the defrost end and evaporator fans start.

**FSt Fan stop temperature:** (-50÷110°C; -58÷230°F) setting of temperature, detected by evaporator probe, above which the fan is always OFF.

**ALARMS**

**ALC Temperature alarm configuration**

rE = High and Low alarms related to Set Point

Ab = High and low alarms related to the absolute temperature.

**ALU High temperature alarm setting:**

ALC = rE, 0 ÷ 50°C or 90°F

ALC = Ab, ALL ÷ 110°C or 230°F

when this temperature is reached and after the ALd delay time the HA alarm is enabled.

**ALL Low temperature alarm setting:**

ALC = rE , 0 ÷ 50 °C or 90°F

ALC = Ab , -50°C or -58°F + ALU

when this temperature is reached and after the ALd delay time, the LA alarm is enabled.

**AFH Temperature alarm and fan differential:** (0,1÷25,5°C; 1÷45°F) Intervention differential for temperature alarm set point and fan regulation set point, always positive.

**ALd Temperature alarm delay:** (0÷255 min) time interval between the detection of an alarm condition and the corresponding alarm signalling.

**dAO Delay of temperature alarm at start-up:** (0min÷23h 50min) time interval between the detection of the temperature alarm condition after the instrument power on and the alarm signalling.

**EdA Alarm delay at the end of defrost:** (0÷255 min) Time interval between the detection of the temperature alarm condition at the end of defrost and the alarm signalling.

**dot Delay of temperature alarm after closing the door :** (0÷255 min) Time delay to signal the temperature alarm condition after closing the door.

**doA Open door alarm delay:** (0÷255 min) delay between the detection of the open door condition and its alarm signalling: the flashing message "dA" is displayed.

**tbA Buzzer and alarm relay silencing:** by pushing one of the keypad buttons.

n= Only the Buzzer is silenced;

y= Buzzer and relay are silenced.

**nPS Pressure switch number:** (0÷15) Number of activation of the pressure switch, during the "did" interval, before signalling the alarm event (I2F= PAL).

**PROBE INPUTS**

**O Thermostat probe calibration:** (-12.0÷12.0°C/ -21÷21°F) allows to adjust possible offset of the thermostat probe.

**OE Evaporator probe calibration:** (-12.0÷12.0°C/ -21÷21°F) allows to adjust possible offsets of the evaporator probe.

O3 **Auxiliary probe calibration:** (-12.0+12.0°C / -21+21°F) allows to adjust possible offsets of the evaporator probe.

#### P2P Evaporator probe presence:

n= not present: the defrost stops only by time; y= present: the defrost stops by temperature and time.

#### P3P Auxiliary probe presence: n= not present; y= present.

HES **Temperature increase during the Energy Saving cycle :** (-30.0°C + 30.0°C / -22+86°F) sets the increasing value of the set point during the Energy Saving cycle.

#### DIGITAL INPUTS

odc **Compressor and fan status when open door:**

no = normal;

Fan = Fan OFF;

CPr = Compressor OFF;

F\_C = Compressor and fan OFF.

#### I1P Door switch input polarity:

CL : the digital input is activated by closing the contact;

OP : the digital input is activated by opening the contact.

#### I2P Configurable digital input polarity:

CL : the digital input is activated by closing the contact;

OP : the digital input is activated by opening the contact

#### I2F Digital input operating mode: configure the digital input function:

EAL = generic alarm;

bAL = serious alarm mode;

PAL = Pressure switch;

dFr = Start defrost;

AUS = Relay AUX actuation;

Es = Energy Saving;

onF = remote On/OFF.

did **Time interval/delay for digital input alarm:** (0+255 min.) Time interval to calculate the number of the pressure switch activation when I2F=PAL. If I2F=EAL or bAL (external alarms), "did" parameter defines the time delay between the detection and the successive signalling of the alarm.

SAA **Set Point for anti-condensing heater:** (-50.0+110.0°C; -58+230°F) defines the room temperature setpoint to switch on the anti-condensing heater.

#### OTHER

Adr **RS485 serial address** (1+247): Identifies the instrument address when connected to a ModBUS compatible monitoring system.

Rel **Release software:** (read only) Software version of the microprocessor.

Ptb **Parameter table:** (read only) it shows the original code of the **dixell** parameter map.

Prd **Probes display:** (read only) display the temperature values of the evaporator probe Pb2 and the auxiliary probe Pb3.

Pr2 **Access to the protected parameter list:** (read only).

#### DIGITAL INPUTS

The Wing series can support up to 2 free contact digital inputs. One is always configured as door switch, the second is programmable in seven different configurations by the "I2F" parameter.

#### DOOR SWITCH INPUT

It signals the door status and the corresponding relay output status through the "odc" parameter:

no = normal (any change);

Fan = Fan OFF;

CPr = Compressor OFF;

F\_C = Compressor and fan OFF.

Since the door is opened, after the delay time set through parameter "dOA", the alarm output is enabled and the display shows the message "dA". The alarm stops as soon as the external digital input is disabled again. During this time and then for the delay "dot" after closing the door, the high and low temperature alarms are disabled.

#### CONFIGURABLE INPUT - GENERIC ALARM (EAL)

As soon as the digital input is activated the unit will wait for "did" time delay before signalling the "EAL" alarm message. The outputs status don't change. The alarm stops just after the digital input is de-activated.

#### CONFIGURABLE INPUT - SERIOUS ALARM MODE (BAL)

When the digital input is activated, the unit will wait for "did" delay before signalling the "BAL" alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is de-activated.

#### CONFIGURABLE INPUT - PRESSURE SWITCH (PAL)

If during the interval time set by "did" parameter, the pressure switch has reached the number of activation of the "nPS" parameter, the "PAL" pressure alarm message will be displayed. The compressor and the regulation are stopped. When the digital input is ON the compressor is always OFF.

#### CONFIGURABLE INPUT - START DEFROST (DFR)

It executes a defrost if there are the right conditions. After the defrost is finished, the normal regulation will restart only if the digital input is disabled otherwise the instrument will wait until the "MdI" safety time is expired.

#### CONFIGURABLE INPUT - RELAY AUX ACTUATION (AUS)

This function allows to turn ON and OFF the auxiliary relay by using the digital input as external switch.

#### CONFIGURABLE INPUT - ENERGY SAVING (ES)

The Energy Saving function allows to change the set point value as the result of the SET+ HES (parameter) sum. This function is enabled until the digital input is activated.

#### CONFIGURABLE INPUT - REMOTE ON/OFF (ONF)

This function allows to switch ON and OFF the instrument.

#### DIGITAL INPUTS POLARITY

The digital inputs polarity depends on "I1P" and "I2P" parameters.


CL : the digital input is activated by closing the contact.

OP : the digital input is activated by opening the contact


#### INSTALLATION AND MOUNTING

Instruments XW270L, XW271L shall be mounted on vertical panel, in a 150x31 mm hole, and fixed using two screws Ø 3 x 2mm. To obtain an IP65 protection grade use the front panel rubber gasket (mod. RG-L). The temperature range allowed for correct operation is 0 - 60 °C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let the air circulate by the cooling holes.


#### CUT OUT

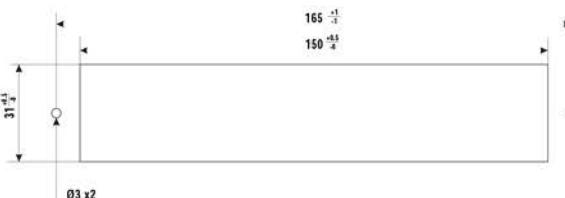

#### MOUNTING WITH KEYBOARD COVER OPENING DOWNWARD

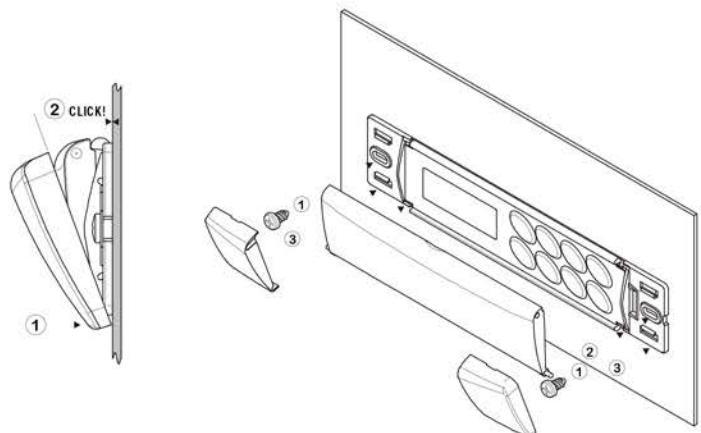

#### MOUNTING WITH KEYBOARD COVER OPENING UPWARD

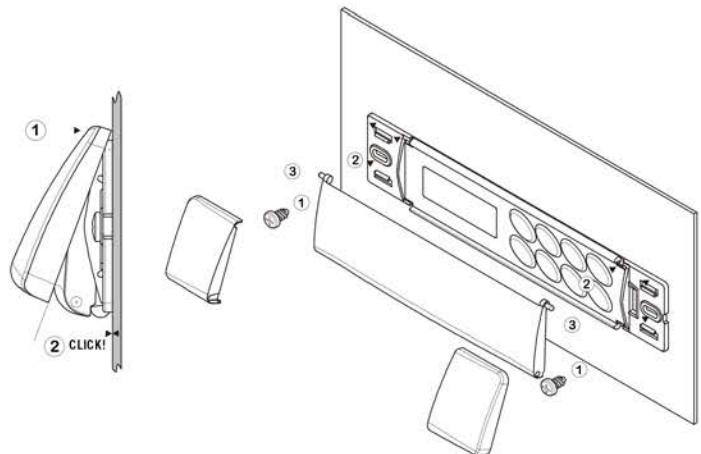

#### ELECTRICAL CONNECTIONS

The instruments are provided with screw terminal block to connect cables with a cross section up to 2,5 mm<sup>2</sup> for the digital and analogue inputs. Relays and power supply have a Faston connection (6,3mm). Heat-resistant cables have to be used. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

N.B. Maximum current allowed for all the loads is 20A.

#### PROBE CONNECTIONS

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters or from the warmest place during defrost, to prevent premature defrost termination.

#### TTL SERIAL LINE

The TTL connector allows, by means of the external module TTL/RS485, to connect the unit to a network line ModBUS-RTU compatible as the **dixell** monitoring system XJ500 (Version 3.0).

The same TTL connector is used to upload and download the parameter list of the "HOT KEY".

**USE OF THE PROGRAMMING "HOT KEY"**

The Wing units can UPLOAD or DOWNLOAD the parameter list from its own E2 internal memory to the "Hot Key" and vice-versa.

**DOWNLOAD (FROM THE "HOT KEY" TO THE INSTRUMENT)**

- Turn OFF the instrument by means of the ON/OFF key, remove the TTL serial cable if present, insert the "Hot Key" and then turn the Wing ON.
- Automatically the parameter list of the "Hot Key" is downloaded into the Wing memory, the "DoL" message is blinking. After 10 seconds the instrument will restart working with the new parameters.
- Turn OFF the instrument remove the "Hot Key", plug in the TTL serial cable, then turn it ON again.

At the end of the data transfer phase the instrument displays the following messages:

"end" for right programming. The instrument starts regularly with the new programming.

"err" for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the "Hot key" to abort the operation.

**UPLOAD (FROM THE INSTRUMENT TO THE "HOT KEY")**

- Turn OFF the instrument by means of the ON/OFF key and remove the TTL serial cable if present; then turn it ON again.
- When the Wing unit is ON, insert the "Hot key" and push **▲** key; the "uPL" message appears.
- Push "SET" key to start the UPLOAD: the "uPL" message is blinking.
- Turn OFF the instrument remove the "Hot Key", plug in the TTL serial cable, then turn it ON again.

At the end of the data transfer phase the instrument displays the following messages:

"end" for right programming.

"err" for failed programming. In this case push "SET" key if you want to restart the programming again or remove the not programmed "Hot key".

**ALARM SIGNALS**

Message	Cause	Outputs
"P1"	Thermostat probe failure	Alarm output ON; Compressor output according to parameters "CON" and "COF"
"P2"	Evaporator probe failure	Alarm output ON; Other outputs unchanged
"P3"	Auxiliary probe failure	Alarm output ON; Other outputs unchanged
"HA"	Maximum temperature alarm	Alarm output ON; Other outputs unchanged
"LA"	Minimum temperature alarm	Alarm output ON; Other outputs unchanged
"EE"	Data or memory failure	Alarm output ON; Other outputs unchanged
"dA"	Defrost timeout alarm	Alarm output ON; Other outputs unchanged
"dAL"	Door switch alarm	Alarm output ON; Other outputs unchanged
"EAL"	External alarm	Alarm output ON; Other outputs unchanged
"BAL"	Serious external alarm	Alarm output ON; Other outputs OFF
"PAL"	Pressure switch alarm	Alarm output ON; Other outputs OFF

The alarm message is displayed until the alarm condition is recovery.

All the alarm messages are showed alternating with the room temperature except for the "P1" which is flashing. To reset the "EE" alarm and restart the normal functioning press any key, the "rst" message is displayed for about 3s.

**SILENCING BUZZER / ALARM RELAY OUTPUT**

If "tbA = y", once the alarm signal is detected the buzzer and the relay are silenced by pressing any key. If "tbA = n", only the buzzer is silenced while the alarm relay is on until the alarm condition recovers.

**"EE" ALARM**

The **dixell** instruments are provided with an internal check for the data integrity. Alarm "EE" flashes when a failure in the memory data occurs. In such cases the alarm output is enabled.

**ALARM RECOVERY**

Probe alarms : "P1" (probe1 faulty), "P2" and "P3"; they automatically stop 10s after the probe restarts normal operation. Check connections before replacing the probe.

Temperature alarms "HA" and "LA" automatically stop as soon as the thermostat temperature returns to normal values or when the defrost starts.

Door switch alarm "dA" stop as soon as the door is closed.

External alarms "EAL", "BAL" stop as soon as the external digital input is disabled "PAL" alarm is recovered by switching OFF the instrument.

**TECHNICAL DATA**

**Housing:** self extinguishing ABS.

**Case:** facia 38x185 mm; depth 76mm

**Mounting :** panel mounting in a 150x31 mm panel cut-out with two screws. Ø 3 x 2mm.

Distance between the holes 165mm

**Protection:** IP20.

**Frontal protection:** IP65 with frontal gasket mod RG-L. (optional)

**Connections:** Screw terminal block ≤ 2,5 mm<sup>2</sup> heat-resistant wiring and 6,3mm Faston

**Power supply:** 230Vac or. 110Vac ± 10%

**Power absorption:** 7VA max.

**Display:** 3 digits, red LED, 14,2 mm high.

**Inputs:** 3 NTC probes

**Digital inputs:** 2 free voltage

**Relay outputs: Total current on loads MAX. 20A**

**compressor:** relay SPST 20(8) A, 250Vac

**light:** relay SPST 16(3) A, 250Vac

**fans:** relay SPST 8(3) A, 250Vac

**defrost:** relay SPST 8(3) A, 250Vac

**alarm:** SPST relay 8(3) A, 250Vac

**auxiliary:** SPST relay 16(3) A, 250Vac

**Other output :** alarm buzzer

**Serial output :** TTL standard

**Communication protocol:** Modbus - RTU

**Data storing:** on the non-volatile memory (EEPROM).

**Kind of action:** 1B.

**Pollution grade:** normal

**Software class:** A.

**Operating temperature:** 0÷60 °C.

**Storage temperature:** -25÷60 °C.

**Relative humidity:** 20÷85% (no condensing)


**Measuring and regulation range: NTC probe:** -40÷110°C (-58÷230°F)

**Resolution:** 0,1 °C or 1 °C or 1 °F (selectable).

**Accuracy (ambient temp. 25°C):** ±0,5 °C ±1 digit

**CONNECTIONS****XW270L/XW271L**

(\*) In XW271L, AUX is an anticondensing heater

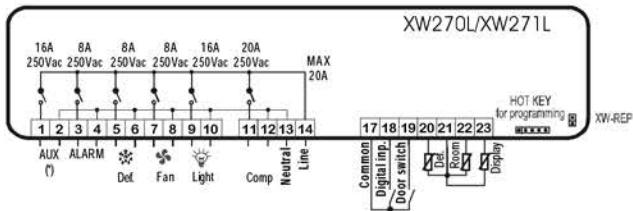

XW270L/XW271L

HOT KEY  
for programming

XW-REP

**DEFAULT SETTING VALUES**

Label	Name	Range	Default	Level
<b>REGULATION</b>				
Set	Set point	LS-US	-5	Pr1
Hy	Differential	0,1÷25,5 °C / 1÷45°F	2	Pr1
LS	Minimum set point	-50,0°C÷SET / -58°F÷SET	-30	Pr2
US	Maximum set point	SET ÷ 110°C / SET ÷ 230°F	20	Pr2
OdS	Outputs activation delay at start up	0÷255 min.	1	Pr2
AC	Anti-short cycle delay	0÷30 min.	1	Pr1
CCt	Compressor ON time during fast freezing	0 ÷ 23h 50 min.	0	Pr2
COn	Compressor ON time with faulty probe	0÷255 min.	15	Pr2
COF	Compressor OFF time with faulty probe	0÷255 min.	30	Pr2
<b>DISPLAY</b>				
CF	Temperature measurement unit	°C + °F	°C	Pr2
rES	Resolution (integer/decimal point)	in + de	de	Pr1
Lod	Local display	P1 ÷ 1r2	P1	Pr2
Red	Remote display	P1 ÷ 1r2	P1	Pr2
<b>DEFROST</b>				
tdF	Defrost type	rE, rT, in	rE	Pr1
EdF	Defrost mode	In, Sd	In	Pr2
SdF	Set point for SMART DEFROST	-30 ÷ +30°C / -22÷+86°F	0	Pr2
dtF	Defrost termination temperature (1°Evaporator)	-50,0÷110°C / -58÷230°F	8	Pr1
IdF	Interval between defrost cycles	1÷120h	6	Pr1
MdF	(Maximum) length for 1° defrost	0÷255 min.	30	Pr1
dFd	Displaying during defrost	rt, it, SET, dEF, dEG	it	Pr2
dAd	MAX display delay after defrost	0÷255 min.	30	Pr2
Fdt	Draining time	0÷60 min.	0	Pr2
dPO	First defrost after start up	n ÷ y	n	Pr2
dAF	Defrost delay after fast freezing	0 ÷ 23h 50 min.	2	Pr2
<b>FANS</b>				
FnC	Fans operating mode	C-n, C-y, O-n, O-y	O-n	Pr2
Fnd	Fans delay after defrost	0÷255 min.	10	Pr2
FSt	Fans stop temperature	-50,0÷110°C / -58÷230°F	2	Pr2
<b>ALARMS</b>				
ALC	Temperature alarms configuration	rE+Ab	rE	Pr2
ALU	MAXIMUM temperature alarm	-50,0÷110°C / -58÷230°F	10	Pr1
ALL	minimum temperature alarm	-50,0÷110°C / -58÷230°F	10	Pr1
AFH	Temperature alarm and fan differential	0,1÷25,5 °C / 1÷45°F	2	Pr2
AlD	Temperature alarm delay	0÷255 min.	15	Pr2
dAO	Delay of temperature alarm at start up	0 ÷ 23h 50 min.	1,3	Pr2
EdA	Alarm delay at the end of defrost	0÷255 min.	30	Pr2
dot	Delay of temperature alarm after closing the door	0÷255 min.	15	Pr2
dOA	Open door alarm delay	0÷255 min.	15	Pr2
tBA	Alarm relay silencing	y ÷ n	y	Pr2
nPS	Pressure switch activation number	0÷15	0	Pr2
<b>ANALOGUE INPUTS</b>				
Ot	Thermostat probe calibration	-12,0÷12,0°C / -21÷21°F	0	Pr1
OE	Evaporator probe calibration	-12,0÷12,0°C / -21÷21°F	0	Pr2
O3	Auxiliary probe calibration	-12,0÷12,0°C / -21÷21°F	0	Pr2
P2P	Evaporator probe presence	n ÷ y	y	Pr2
P3P	Auxiliary probe presence	n ÷ y	n	Pr2
HES	Temperature increase during the Energy Saving cycle	-30÷30°C / -22÷86°F	0	Pr2
<b>DIGITAL INPUTS</b>				
Odc	Open door control	no, Fan, CPr, F_C	Fan	Pr2
I1P	Door switch polarity	CL=OP	CL	Pr2
I2P	Configurable digital input polarity	CL=OP	CL	Pr2
i2F	Digital input configuration	EAL, BAL, PAL, dFr, AUS, ES, On	EAL	Pr2
dld	Digital input alarm delay	0÷255 min.	5	Pr2
SAA	Set point for anti-condensing heater	-50,0÷110°C / -58÷230°F	-20,0	Pr2
<b>OTHER</b>				
Adr	Serial address	0÷247	1	Pr1
rEL	Software release	---	1,0	Pr2
Ptb	Map code	---	---	Pr2
Prd	Probes display	Pb1+Pb3	---	Pr2
Pr2	Access parameter list	---	---	Pr2

DIXELL Wizmate 1.3.0.0

File Name:16-UL-Dixell XH78T

Date :

Model : XH78T

Firmware : 0.8


Memo :

Group	Parameter	Description	Edit	Vis. Level	Unit
rEG	SEt	Set Point	5	Pr1	°F
rEG	LS	Minimum Set point	-22	Pr1	°F
rEG	US	Maximum Set point	32	Pr1	°F
rEG	HY	Compressor regulation differential in normal mode	4	Pr1	°F
rEG	HYE	Compressor regulation differential in energy saving mode	4	Pr1	°F
rEG	HY1	Proportional regulation differential in normal mode	4	Pr1	°F
rEG	HYS	Proportional regulation differential in energy saving mode	4	Pr1	°F
rEG	Hyd	Deadband output regulation (oAx=db) differential	4	Pr1	°F
rEG	SH1	Humidity Set Point	60.0	Pr1	%
rEG	LSH	Minimum humidity Set Point	30.0	Pr1	%
rEG	USH	Maximum humidity Set Point	80.0	Pr1	%
rEG	HHA	Positive humidity regulation differential (SEH+HHA)	10.0	Pr1	%
rEG	HHb	Negative humidity regulation differential (SEH-HHB)	10.0	Pr1	%
rEG	rAr	Delay between compressor and db output (oAx=db) activation and vice versa	1	Pr1	min
rEG	odS	Output activation delay at start-up	0	Pr1	min
rEG	AC	Anti-short cycle delay	1	Pr1	min
rEG	AC1	Anti-short cycle delay (2nd compressor)	0	Pr1	sec
rEG	2CC	Activation mode for 2nd compressor: HAF=step logic; FUL=delayed	FUL	Pr2	
rEG	rCC	Enable compressor rotation	no	Pr2	
rEG	MCo	Maximum time with compressor on (0=disabled)	0	Pr2	min
rEG	rtr	Regulation percentage=F(P1; P2) (100=P1; 0=P2)	100	Pr1	
rEG	CCt	Maximum duration for Pull Down	00:00	Pr1	ora
rEG	CCS	Pull Down phase differential (SET+CCS or SET+HES+CCS)	5	Pr1	°F
rEG	oHt	Threshold for automatic activation of Pull Down in normal mode (SET+HY+oHT)	25	Pr1	°F
rEG	oHE	Threshold for automatic activation of Pull Down in energy saving mode (SET+HES+HYE+oHE)	25	Pr1	°F
rEG	Con	Compressor ON time with faulty probe	5	Pr1	min
rEG	CoF	Compressor OFF time with faulty probe	10	Pr1	min
rEG	Cht	Type of regulation: Ht=heating; CL=cooling; db=dead band	CL	Pr1	
rEG	tHU	Type of humidity regulation	t4	Pr1	
rEG	rH1	Delay before activating heating output for dehumidification	60	Pr1	sec
Prb	P1C	Probe P1 selection	ntC	Pr2	
Prb	P2C	Probe P2 selection	ntC	Pr2	
Prb	P3C	Probe P3 selection	ntC	Pr2	
Prb	P4C	Probe P4 selection	Cur	Pr2	
Prb	ot	Probe P1 calibration	0	Pr2	°F
Prb	P2P	Probe P2 presence	no	Pr2	
Prb	oE	Probe P2 calibration	0	Pr2	°F
Prb	P3P	Probe P3 presence	no	Pr2	
Prb	o3	Probe P3 calibration	0	Pr2	°F
Prb	P4P	Probe P4 presence	no	Pr2	
Prb	o4	Probe P4 calibration	0.0	Pr2	%
Prb	1Ai	Type of analogue input 1	rH	Pr2	
Prb	1UA	Upper limit for analogue input Ai1	20.0	Pr2	mA
Prb	1LA	Lower limit for analogue input Ai1	4.0	Pr2	mA
Prb	1UC	Upper limit for analogue scaling factor	100.0	Pr2	%
Prb	1LC	Lower limit for analogue scaling factor	0.0	Pr2	%
dis	CF	Temperature measurement unit: Celsius; Fahrenheit	°F	Pr1	
dis	rES	Temperature resolution: decimal, integer	in	Pr1	
dis	rEH	Humidity resolution: decimal, integer	dE	Pr1	
dis	Lod	Probe default displayed	P1	Pr1	
dis	rEd	Remote probe displayed (for XH-REP)	P1	Pr1	
dis	dLy	Temperature display delay (resolution 10 sec)	00:00	Pr1	min
dis	dtr	Probe visualization percentage=F(P1;P2) (ex: dtr=1 means VALUE=0.01*P1+0.99*P2)	99	Pr1	
dis	dt	Temperature value visualisation time	5	Pr1	sec
dis	dH	Humidity value visualisation time	5	Pr1	sec
dEF	EdF	Defrost mode	in	Pr1	
dEF	tdF	Defrost type: electric heating, hot gas	EL	Pr1	
dEF	dFP	Probe selection for defrost control	P2	Pr1	
dEF	dSP	Probe selection for 2nd defrost control	nP	Pr1	
dEF	dtE	End defrost temperature	-58	Pr1	°F
dEF	dtS	End 2nd defrost temperature	8	Pr2	°F
dEF	idF	Interval between two successive defrost cycles	8	Pr1	ora
dEF	MdF	Maximum length of defrost cycle	0	Pr1	min
dEF	MdS	Maximum length of 2nd defrost cycle	0	Pr2	min
dEF	dSd	Start defrost delay	0	Pr1	sec
dEF	StC	Compressor off-cycle before starting any defrost	0	Pr1	sec
dEF	dFd	Displaying during defrost	dEF	Pr1	
dEF	dFr	Remote display visualization during any defrost	dEF	Pr1	
dEF	dAd	Temperature display delay after any defrost cycle	10	Pr1	min
dEF	Fdt	Draining time	5	Pr1	min
dEF	Hon	Drain heater enabled after draining time (par. Fdt)	12	Pr1	min
dEF	dPo	Defrost cycle enebled at stat-up	no	Pr1	

dEF	HYP	Differential temperature during any pre-defrost phase	0	Pr1	°F
dEF	Pd2	Defrost output deactivation delay	0	Pr1	sec
dEF	dAF	Pre-defrost time	0	Pr1	min
dEF	od1	Automatic defrost (at the beginning of any energy saving)	no	Pr1	
dEF	od2	Optimized defrost	no	Pr2	
dEF	dSt	Temperature sampling time during an optimized defrost (valid only if od2=yes)	30	Pr2	sec
dEF	SYd	Type of synchronized defrost	nU	Pr2	
dEF	dt1	Differential temperature for latent heating control	0.5	Pr2	°C
dEF	ErS	Restart regulation after dripping (valid only if Syd = nSY)	no	Pr1	
dEF	HdU	Humidity regulation active during any defrost phase	no	Pr1	
FAAn	FAP	Probe selection for evaporator fan	nP	Pr1	
FAAn	FSt	Evaporator fan stop temperature	122	Pr1	°F
FAAn	HYF	Evaporator fan regulator differential	4	Pr1	°F
FAAn	oFE	Offset for evaporator fan activation and deactivation	0	Pr1	°F
FAAn	FnC	Evaporator fan operating mode	O_Y	Pr1	
FAAn	Fnd	Evaporator fan delay after defrost cycle	0	Pr1	min
FAAn	Fct	Differential for cyclic activation of evaporator fans	0	Pr1	°F
FAAn	FSU	Evaporator fan operating mode	Std	Pr1	
FAAn	Ft	Evaporator fan controlled during defrost	no	Pr1	
FAAn	Fon	Evaporator fan ON time in normal mode (with compressor OFF)	1	Pr1	min
FAAn	FoF	Evaporator fan OFF time in normal mode (with compressor OFF)	0	Pr1	min
FAAn	Fo1	Evaporator fan ON time in energy saving (with compressor OFF)	2	Pr1	min
FAAn	FF1	Evaporator fan OFF time in energy saving (with compressor OFF)	3	Pr1	min
FAAn	Fd1	Evaporator fan delay	0	Pr1	sec
FAAn	Fd2	Evaporator fan delay after closing door	0	Pr1	sec
FAAn	Fnu	Number of motion detections before forcing evaporator fans at FMr	0	Pr1	
FAAn	FMr	Evaporator fan speed after Fnu motion detections	0	Pr1	%
FAAn	Fti	Evaporator fans operating at FMr	0	Pr1	min
FAAn	LA1	Maintenance interval for evaporator fans (tens of hours)	0	Pr1	
FAAn	rS1	Evaporator fan maintenance function reset	no	Pr1	
FAAn	FAC	Probe selection for condenser fan	nP	Pr1	
FAAn	St2	Set Point 2 Regulation (for condenser fan)	20	Pr1	°F
FAAn	Hy2	Set Point 2 differential (for condenser fan)	10	Pr1	°F
FAAn	oFC	Offset for condenser fan activation and deactivation	0	Pr1	°F
FAAn	FCC	Condenser fan operating mode	C_n	Pr1	
FAAn	Fd3	Condenser fan activation delay	0	Pr1	sec
FAAn	Fd4	Condenser fan deactivation delay	0	Pr1	sec
FAAn	LA2	Maintenance interval for condenser fans (tens of hours)	0	Pr1	
FAAn	rS2	Condenser fan maintenance function reset	no	Pr1	
FAAn	iAE	Interval between air extraction fan activation	00:00	Pr1	ora
FAAn	tAE	Air extraction fan running time	0	Pr1	min
AUS	ACH	Type of control for auxiliary regulator	CL	Pr1	
AUS	SAA	Set point for auxiliary regulator	0	Pr1	°F
AUS	SHy	Auxiliary regulator differential	4	Pr1	°F
AUS	ArP	Probe selection for auxiliary regulator	nP	Pr1	
AUS	Sdd	Auxiliary regulator disabled during any defrost cycle	no	Pr1	
AUS	btA	Base time for parameters Ato and AtF	Sec	Pr1	
AUS	Ato	Interval of time with auxiliary output ON	0	Pr1	sec
AUS	AtF	Interval of time with auxiliary output OFF	0	Pr1	sec
dYn	dSi	Reference probe for dynamic Set Point	nP	Pr2	
dYn	dSS	Dynamic Set Point value	0	Pr2	°F
dYn	dSb	Range dynamic Set Point	10	Pr2	°F
dYn	dSH	Dynamic Set Point differential	5	Pr2	°F
ALr	ALP	Probe selection for temperature alarms	P1	Pr1	
ALr	ALC	Temperature alarms configuration: relative, absolute	Ab	Pr1	
ALr	ALU	High temperature alarm	150	Pr1	°F
ALr	ALL	Low temperature alarm	-100	Pr1	°F
ALr	AFH	Temperature alarm differential	2	Pr1	°F
ALr	AlD	Temperature alarm delay	15	Pr1	min
ALr	dot	Temperature alarm delay when open door	00:30	Pr1	min
ALr	dAo	Temperature alarm delay at start-up	00:40	Pr1	ora
ALr	AP2	Probe selection for 2nd temperature alarm	nP	Pr1	
ALr	AU1	Pre-alarm threshold for 2nd temperature alarm (absolute value)	100	Pr1	°F
ALr	AH1	2nd high temperature pre-alarm differential	5	Pr1	°F
ALr	Ad1	2nd high temperature pre-alarm delay	0	Pr1	min
ALr	AL2	2nd low temperature alarm	-100	Pr1	°F
ALr	AU2	2nd high temperature alarm	150	Pr1	°F
ALr	AH2	2nd temperature alarm differential	5	Pr1	°F
ALr	Ad2	2nd temperature alarm delay	0	Pr1	min
ALr	dA2	2nd temperature alarm delay at start-up	00:00	Pr1	ora
ALr	bLL	Compressor OFF due to 2nd low temperature alarm	n	Pr1	
ALr	AC2	Compressor OFF due to 2nd high temperature alarm	n	Pr1	
ALr	SAF	Differential for anti-freezing control	0	Pr1	°F
ALr	tba	Alarm relay deactivation	no	Pr1	
ALr	AHC	Humidity alarm configuration	Ab	Pr1	
ALr	AHL	Low humidity alarm	0.0	Pr1	%
ALr	AHU	High humidity alarm	100.0	Pr1	%
ALr	AHH	Humidity alarm differential	5.0	Pr1	%
ALr	AHd	Humidity alarm delay	0	Pr1	sec
ALr	dHo	Humidity alarm delay at start-up	00:00	Pr1	ora

Alr	doH	Humidity alarm delay with door open	0	Pr1	min
Alr	EdA	Temperature alarm inhibition after any defrost	30	Pr1	min
Alr	iSn	Interval between sanitizations	00:00	Pr1	ora
Alr	tSn	Sanitization time	00:00	Pr1	ora
oUt	oA1	Relay output oA1 configuration	CP1	Pr2	
oUt	oA2	Relay output oA2 configuration	FAn	Pr2	
oUt	oA3	Relay output oA3 configuration	dEF	Pr2	
oUt	oA4	Relay output oA4 configuration	HEt	Pr2	
oUt	AOP	Alarm relay polarity	CL	Pr2	
oUt	LoF	Light output OFF when in stand-by	no	Pr2	
oUt	LAU	Light output ON after power-on	no	Pr2	
AoU	2Ao	Analogue output 2 configuration	nU	Pr2	
AoU	2oL	Minimum value for analogue output 2	0	Pr2	%
AoU	2oH	Maximum value for analogue output 2	100	Pr2	%
AoU	2At	Interval with analogue output 2 forced at its maximum value	5	Pr2	sec
AoU	MA2	Working mode for analogue output 2	Std	Pr2	
AoU	2on	Analogue output 2 ON (valid if 2Ao=tiM)	0	Pr2	sec
AoU	2oF	Analogue output 2 OFF (valid if 2Ao=tiM)	0	Pr2	sec
AoU	2AS	Fixed value for analogue output 2 (valid if 2Ao=vAL)	50	Pr2	%
AoU	LL1	Level 1 for analogue output 2	0	Pr2	%
AoU	LL2	Level 2 for analogue output 2	30	Pr2	%
AoU	LL3	Level 3 for analogue output 2	60	Pr2	%
AoU	LL4	Level 4 for analogue output 2	100	Pr2	%
inP	ibt	Base times for digital inputs	Min	Pr1	
inP	i1P	Digital input 1 polarity	OP	Pr1	
inP	i1F	Digital input 1 configuration	nU	Pr1	
inP	did	Digital inputs 1 alarm delay (base time depends on par. int)	5	Pr1	min
inP	i2P	Digital input 2 polarity	CL	Pr1	
inP	i2F	Digital input 2 configuration	EAL	Pr1	
inP	d2d	Digital inputs 2 alarm delay (base time depends on par. int)	0	Pr1	min
inP	i3P	Digital input 3 polarity	CL	Pr2	
inP	i3F	Digital input 3 configuration	nU	Pr2	
inP	d3d	Digital inputs 3 alarm delay (base time depends on par. int)	0	Pr2	min
inP	nPS	Number of external pressure switch alarms before stopping the regulation	0	Pr1	
inP	OdC	Compressor and fan status after door opening	FAn	Pr1	
inP	rrd	Regulation restart after door alarm	no	Pr1	
inP	CLi	Light output activation from door input	no	Pr1	
inP	LCi	Time with light output forced ON (0=function disabled)	0	Pr1	min
inP	n01	Number of motion detections before activating light output (valid if ixF=EMt)	0	Pr1	
inP	t01	Time with light output forced ON after motion detection	0	Pr1	min
inP	EMF	Motion sensor stop reading interval after switching off the light output by button or serial command (valid if ixF=EMt)	0	Pr1	min
ES	ErA	Energy saving algorithm	nu	Pr1	
ES	HES	Energy saving mode temperature differential	0.0	Pr1	°F
ES	LdE	Energy saving controls the lights (lights OFF when energy saving is active)	no	Pr1	
ES	StE	Period to switch from normal mode to energy saving mode (valid if ErA=bAS)	00:00	Pr1	ora
ES	EtS	Period to switch from energy saving mode to normal mode (valid if ErA=bAS)	00:00	Pr1	ora
ES	dS	Open door time to switch from EtS to StE (valid if ErA=bAS)	5	Pr1	sec
ES	nES	Number of motion detections before disabling energy saving (valid if ixF=EMt)	0	Pr1	
Cnt	n1H	Number of activations for relay output oA1 (thousands of)		Pr1	
Cnt	n1L	Number of activations for relay output oA1 (units of)		Pr1	
Cnt	n2H	Number of activations for relay output oA2 (thousands of)		Pr1	
Cnt	n2L	Number of activations for relay output oA2 (units of)		Pr1	
Cnt	n3H	Number of activations for relay output oA3 (thousands of)		Pr1	
Cnt	n3L	Number of activations for relay output oA3 (units of)		Pr1	
Cnt	n4H	Number of activations for relay output oA4 (thousands of)		Pr1	
Cnt	n4L	Number of activations for relay output oA4 (units of)		Pr1	
Cnt	n5H	Number of total activations of digital input 1 (thousands of)		Pr1	
Cnt	n5L	Number of total activations of digital input 1 (units of)		Pr1	
Cnt	n6H	Number of total activations of digital input 2 (thousands of)		Pr1	
Cnt	n6L	Number of total activations of digital input 2 (units of)		Pr1	
Cnt	n7H	Number of total activations of digital input 3 (thousands of)		Pr1	
Cnt	n7L	Number of total activations of digital input 3 (units of)		Pr1	
Cnt	F1H	Number of working hours for relay output oA1 (thousands of)		Pr1	ora
Cnt	F1L	Number of working hours for relay output oA1 (units of)		Pr1	ora
Cnt	F2H	Number of working hours for relay output oA2 (thousands of)		Pr1	ora
Cnt	F2L	Number of working hours for relay output oA2 (units of)		Pr1	ora
Cnt	F3H	Number of working hours for relay output oA3 (thousands of)		Pr1	ora
Cnt	F3L	Number of working hours for relay output oA3 (units of)		Pr1	ora
Cnt	F4H	Number of working hours for relay output oA4 (thousands of)		Pr1	ora
Cnt	F4L	Number of working hours for relay output oA4 (units of)		Pr1	ora
Cnt	rSC	Total counters reset	no	Pr1	
rtC	Hur	Hours		Pr1	
rtC	Min	Minutes		Pr1	
rtC	dAY	Day of the week		Pr1	
rtC	dYM	Day of the month		Pr1	
rtC	Mon	Month		Pr1	
rtC	YAr	Year		Pr1	
rtC	Hd1	First day of weekend		nu	Pr1
rtC	Hd2	2nd day of weekend		nu	Pr1
rtC	iLE	Energy saving cycle starting time on working days	00:00	Pr1	ora

rtC	dLE	Energy saving cycle duration on working days	00:00	Pr1	ora
rtC	iSE	Energy saving cycle starting time on weekends	00:00	Pr1	ora
rtC	dSE	Energy saving cycle duration on weekends	00:00	Pr1	ora
rtC	tSA	Sanitization cycle starting time on working days	nu	Pr1	ora
rtC	dSA	Sanitization cycle duration on working days	00:00	Pr1	ora
rtC	HSt	Sanitization cycle starting time on weekends	nu	Pr1	ora
rtC	HSd	Sanitization cycle duration on weekends	00:00	Pr1	ora
rtC	dd1	Sunday defrost	no	Pr1	
rtC	dd2	Monday defrost	no	Pr1	
rtC	dd3	Tuesday defrost	no	Pr1	
rtC	dd4	Wednesday defrost	no	Pr1	
rtC	dd5	Thursday defrost	no	Pr1	
rtC	dd6	Friday defrost	no	Pr1	
rtC	dd7	Saturday defrost	no	Pr1	
rtC	Ld1	1st defrost starting time	nu	Pr1	ora
rtC	Ld2	2nd defrost starting time	nu	Pr1	ora
rtC	Ld3	3rd defrost starting time	nu	Pr1	ora
rtC	Ld4	4th defrost starting time	nu	Pr1	ora
rtC	Ld5	5th defrost starting time	nu	Pr1	ora
rtC	Ld6	6th defrost starting time	nu	Pr1	ora
E2	MAP	Current configuration		Pr2	
E2	LdM	Restore default factory settings		Pr2	
E2	rHA	MAX and Min values reset for HACCP functions (valid if .eMiMa=1)		Pr2	
CoM	Adr	Serial address for COM1	1	Pr1	
CoM	bAU	Baudrate for COM1	9.6	Pr1	
CoM	PAr	Parity control for COM1	no	Pr1	
Ui	b2C	Button 2 configuration	Pdn	Pr2	
Ui	b3C	Button 3 configuration	SAn	Pr2	
Ui	b1F	Button 1 enabled in stand-by	yes	Pr2	
Ui	SCS	User interface timeout	60	Pr2	sec
Ui	bS	Sound Level	3	Pr1	
Ui	PSU	Password for level Pr2	0	Pr2	
inF	dP1	Probe P1 value visualization	0	Pr1	
inF	dP2	Probe P2 value visualization	0	Pr1	
inF	dP3	Probe P3 value visualization	0	Pr1	
inF	dP4	Probe P4 value visualization	0	Pr1	
inF	SPd	Instantaneous compressor speed (RPM * 10)		Pr1	
inF	rSE	Real regulation Set Point (SET + HES + SETd)	0	Pr1	
inF	FdY	Firmware release date: day		Pr1	
inF	FMn	Firmware release date: month		Pr1	
inF	FYr	Firmware release date: year		Pr1	
inF	rEL	Firmware release		Pr1	
inF	SUb	Firmware sub release		Pr1	
inF	Ptb	Parameter map version	1	Pr1	

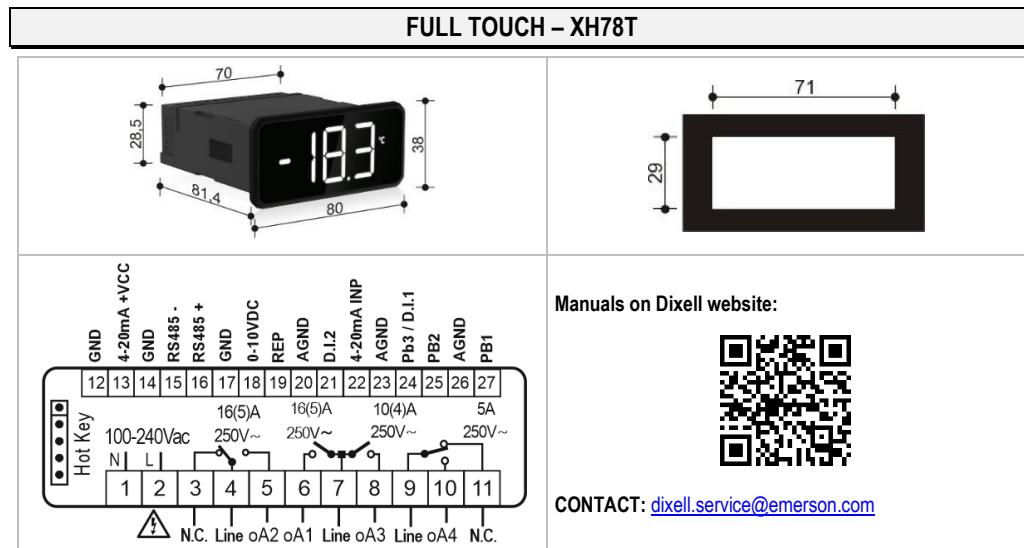

PIN	Label	Description	PIN	Label	Description
12	4-20mA GND	Ground for 4-20mA sensor	20	AGND	Ground for digital inputs and remote display
13	4-20mA +VCC	Power supply for 4-20mA sensor	21	D.I.2	Digital input 2
14	GND	Ground for RS485 serial port	22	4-20mA INP	Analogue input for 4-20mA sensor
15	RS485-	Negative terminal for RS485 (-) serial port	23	AGND	Ground for analogue and digital inputs
16	RS485+	Positive terminal for RS485 (+) serial port	24	Pb3/D.I.1	Analogue input 3 (temperature only) / Digital input 1
17	GND	Ground for analogue output 0-10Vdc	25	Pb2	Analogue input 2 (temperature only)
18	0-10VDC	Analogue output 0-10Vdc	26	AGND	Ground for analogue and digital inputs
19	REP	Remote display	27	Pb1	Analogue input 1 (temperature only)

**SAFETY INFO**

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.
- In case of failure or faulty operation contact the local distributor or "Dixell S.r.l." with a detailed description of the fault.
- The instrument must not be opened.
- Check the application limits and the correct power supply voltage before proceeding.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to avoid condensation
- Warning: disconnect the power supply and all other electrical connections before any kind of maintenance.
- Observe the maximum current value which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.

**USER INTERFACE**

SCREEN	APPEARANCE	SCREEN	APPEARANCE
Home	-18.3 °C	Status Visualization	* -18.3 °C
Virtual Keyboard	Fn AUX ECO	Set Point Menu	SET
Programming Mode	Pr-G	Parameter Menu - ALL	ALL

Parameter Menu - X9		Parameter Menu - Groups	
Upload Parameters		Download Parameters	
Device Locked		Info Menu	

SCREEN NAME	DESCRIPTION		
Home	Show temperature value, measurement unit and active alarms only. It is the first screen after power on or after exit from other status.		
Status Visualization	This screen shows activated functions and regulation outputs (compressor, ventilators) overlapped with temperature and/or humidity value		
Virtual Keyboard	This screen shows available functions. Activated function will blink when this screen is visualized.		
Setpoint menu	This screen enables the modification of setpoints: ST1 for temperature, SH1 for humidity		
Programming Mode	This screen enables the modification of parameters: ALL, GrP or "X9" mode can be used.		
Hotkey Management	UPL = upload parameters from device to HOTKEY, doL = download parameters from HOTKEY to device		
Info Menu	To scroll all I/O variables and status (probes, digital inputs, digital outputs, etc.)		
Device Locked	V-Swipe from Home screen to lock or unlock the device		

**USER INTERACTION**

HOME NAVIGATION	SET POINT TEMPERATURE	PROG MENU	PROG MENU - ALL

GESTURE	HOW-TO	DESCRIPTION
ONE TAP	Press a specific area of the screen with a finger for 1 sec	<b>Switch ON / Switch OFF:</b> when in Virtual Keyboard, use this to turn on/off a specific function. When in Programming mode, use this to select a parameter or a parameter value.
TAP and HOLD	Press anyplace of the surface with a finger for 1 or 3 sec (depending on parameter bPt)	<b>Enter / Save:</b> use this to enter programming mode or parameter menu and to save modifications. When in Virtual Keyboard, use this on the "ONOFF" to switch OFF and ON the device.
H-SWIPE	Drag a finger across surface, from left to right or from right to left	<b>Browse:</b> use horizontal swipe (right to left or left to right) to browse through HOME, Virtual Keyboard and Info View. When in Programming menu: use horizontal swipe to browse through parameter menu.
V-SWIPE	Drag a finger across surface, from top to bottom or from bottom to top (overlapping only one of the digits)	<b>Modify:</b> use vertical swipe (from top to bottom or bottom to top) to change a parameter value.

## TECHNICAL SPECIFICATIONS

FEATURES	DESCRIPTION				
Housing	Self-extinguishing PC/PC+ABS				
Dimensions	Front 38x80 mm; case depth 81mm				
Mounting device	Panel, 71x29mm panel cut-out				
NEMA – UL 50e	Indoor use only, type 1 enclosure				
IP-IEC/EN 60529	Front panel: IP66	Rear Housing: IP20			
Power Supply	100 to 240VAC±10%, 50/60Hz				
Overvoltage Category	II				
Rated Power	100-240VAC: 3VA				
Rated Impulse Voltage	2500V				
Display	White display, LED type, 3 digits with decimal point and multi-function icons				
Buzzer	Internal, always present				
Software Class	A				
Terminal blocks / Terminal Connections	Plug-in or screw terminal block, wire section between 0,5 and 2,5 mm <sup>2</sup> Max tightening force: 0.3 N/m for 3,5mm pitch, 0.4 N/m for 5,0mm pitch				
Data Storing	<b>Real Time Clock:</b> Data maintenance up to 6 months with lithium battery. <b>Other parameters:</b> internal flash.				
Type of Action	1.B				
Pollution Degree	2, non-condensing humidity				
Ambient Operating Temperature and Humidity	IEC/EN	0T55°C; 20-85 rH% (non-condensing humidity)			
	UL-CAN/CSA	-20T55°C; 20-85 rH% (non-condensing humidity)			
Shipping and storage temperature	-40T85°C; 20-85 rH% (non-condensing humidity)				
Resistance to Heat	UL 94 V-0				
Measurement range	NTC: -40T110°C, resolution 0.1°C or 1°C (selectable); PT1000: -100T150°C, resolution 0.1°C or 1°C (selectable); PTC: -50T150°C, resolution 0.1°C or 1°C (selectable) 4-20mA: 0.0 to 100.0% RH; resolution 0.5% RH with Dixell probe models "XH20P"				
Accuracy	NTC, PTC, PT1000: ±1% compared to the full scale 4-20mA: ±1% compared to the full scale				
Inputs	Up to 4 NTC, PTC or PT1000 (configurable); Up to 2 voltage free contacts A 3-wire analogue input 4-20mA with onboard power supply; Terminal 2: max supply voltage = 12Vdc; max supply current = 25mA				
Relay Outputs					
	Nominal	UL	IEC		
	oA1	SPST 16A, 250VAC	Resistive load 11A (NO), 240Vac, 30k cycles; Motor load 10FLA/60LRA (NO), 240Vac, 30k cycles; Pilot Duty B300 (NO), 6k cycles		
			10(4)A (NO), 240Vac, 100k cycles		

FEATURES	DESCRIPTION					
	oA2	SPDT 16A, 250VAC	Resistive load 11A (NO), 240Vac, 30k cycles; Motor load 10FLA/60LRA (NO), 240Vac, 30k cycles; Pilot Duty B300 (NO), 6k cycles	10(4)A (NO), 240Vac, 100k cycles		
	oA3	SPST 10A, 250VAC	Resistive load 4A (NO), 230Vac, 100k cycles; Pilot Duty C300 (NO), 100k cycles	4A (NO), 240Vac, 25k cycles		
	oA4	SPDT 5A, 250VAC	Resistive load 5A (NO), 230Vac, 100k cycles; Motor load 4FLA/4LRA (NO), 100k cycles	5A (NO/NC), 240Vac, 100k cycles		
Optional	oA4	SPST 5A, 250VAC	Resistive load 4A (NO), 240Vac, 100k cycles; Motor load 1/8HP (NO), 120/240Vac, 30k cycles; Pilot duty C300 (NO), 100k cycles	5A (NO), 240Vac, 100k cycles; 1(1)A (NO), 240Vac, 100k cycles		
	oA4	SPDT 7A, 250Vac	Resistive load 5A (NO), 240Vac, 100k cycles; Motor load 4FLA/4LRA (NO), 240Vac, 100k cycles	5A (NC), 240Vac, 100K cycles; 5A (NO), 240Vac, 20K cycles		
	oA1	SPST 16A inrush, 250VAC	Resistive load 11A, 240Vac, 50k cycles;	11A, 240Vac, 30k cycles		
Maximum ampacity on terminal 7	9A (COM OA1 OA3)					
Analogue Outputs	1Ao	Frequency output; Supply max voltage=12Vdc; Max supply current=2mA; duty cycle 50%; 0 to 166 Hz		A3: Fred A4: GND		
	2Ao	Accuracy: ±1Hz compared to the full scale 0-10Vdc; Max supply current=5mA Accuracy: ±1% compared to the full scale		A1: V+ A2: GND		
Remote Display	XH-REP					
I/O port	HOT-KEY: MAX voltage allowed is 5 VDC. DO NOT CONNECT ANY EXTERNAL POWER SUPPLY.					
Purpose of control	Operating control					
Construction of control	Built-in control, intended to be used in Class I or Class II equipment					
Approvals	R290/R600a: relays tested according to IEC EN60079:0 and IEC EN60079:15 IEC 60730-1; IEC 60730-2-9 UL 60730-1; UL 60730-2-9 CAN/CSA E60730-1; CAN/CSA E60730-2-9					